









Originale	Sostituto
 POWER	 Power
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 P. MODE	 Picture / Format
 4	 4
 5	 5
 6	 6
 S. MODE	 Sound / Title
 7	 7
 8	 8
 9	 9
 SLEEP	 Sleep / Timer
 ASPECT	 Shift + Picture / Format
 0	 0
 BACK	 Back / Return

Originale	Sostituto
 NICAM / A2	 Audio / Lang I/II
 INPUT	 AV / Input / RDS
 UP	 Up
 DISPLAY	 Display / Media
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 MENU	 Menu / Home
 DOWN	 Down
 EXIT	 Exit / Cancel / Clear
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat
 BLUE	 Blue / Prime Video / Random
 TEXT	 Text / Goto
 PLAY / PAUSE	 Play / Slow
 PLAY / PAUSE	 Pause / Step / Freeze





Originale	Sostituto
 SIZE	 Zoom / Size
 STOP	 Stop / Hold
 HOLD	 Shift + Stop /
 REW	 << / Tune-
 FWD	 >> / Tune+
 INDEX	 Info / Angle
 REVEAL	 Setup / OPT /
 SKIP PREV.	 I<< / Preset-
 SUBPAGE	 Eject / Surround
 SKIP NEXT	 >>I / Preset+
 REPEAT	 Shift + Green / APP /
 SUBTITLE	 Subtitle / EQ
 AUTO	 Smart / List
 LANG.	 Shift + Audio / Lang I/II
 FAV	 Fav / Marker / PC
 T. SHIFT	 Shift + Pause / Step /
 REC	 Rec / Rec Mode

Originale	Sostituto
 REC. MENU	 D.Menu / Top
 TV / RADIO	 TV/Radio /
 VOL-	 Vol-
 VOL+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+

