

 



 
 
 
 
 
 


 
 


 
 


 


 
 

 




 

 







 

 

 
 


 
 



 

 
 
 
 
 
 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 [i+]/[?]	 DISPLAY INFO Info
 Source	 TIMER AV AV	 RETURN	 RETURN BACK Back
 [+]	 ECO 3D 3D	 ZOOM	 ZOOM Eject
 I<<	 I<<	 MENU	 TOP MENU MENU Menu
 >>I	 >>I	 Up	 Up
 <<	 <<	 Down	 Down
 >>	 >>	 Right	 Right
 Stop	 Stop	 Left	 Left
 Play	 PLAY MODE Play	 OK	 OK Ok
 Pause	 II Pause	 1	 1
 Red	 A Red	 2	 2
 Green	 B Green	 3	 3
 Yellow	 C Yellow	 4	 4
 Blue	 D Blue	 5	 5
 REPEAT Repeat	 SHIFT + REPEAT TEXT Shift + Text	 6	 6
 AUDIO Audio	 SOUND DUAL Dual	 7	 7
 GUIDE Guide	 GUIDE Guide	 8	 8





	Originale	Sostituto	Originale	Sostituto
	9	9		
	0	0		
	0	FAV		
	[≡]	SHIFT + FAV PRE-CH		
	[...]	REPEAT TEXT		
	[+]	AD SUBT		
	Vol+	+ VOL		
	Vol-	VOL -		
	Mute	MUTE		
	Prog+	+ CH		
	Prog-	CH -		
	Recall	FAV PRE-CH		

