







Originale	Sostituto
	 Eject / Surround
	 Power
	 Display / Media
	 Picture / Format
	 Audio / Lang I/II
	 Smart / List
	 Exit / Cancel / Clear
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Originale	Sostituto
	 Guide / EPG / -/--
	 0
	 AV / Input / RDS
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Rec / Rec Mode
	 Shift + Slow Play /
	 Shift + Tune+ >> /
	 D.Menu / Top
	 I<< / Preset-
	 >>I / Preset+
	 Menu / Home
	 Up
	 Pause / Step / Freeze
	 Sleep / Timer





Originale	Sostituto
	Left
	<< / Tune-
	OK
	Play / Slow
	Right
	>> / Tune+
	Down
	Stop / Hold

Originale	Sostituto





Originale		Sostituto	
	Power		Power
	Display		Display / Media
	Format		Picture / Format
	Audio Monitor		Audio / Lang I/II
	TV / Video		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Vol+		Vol+

Originale		Sostituto	
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-

