






Originale	Sostituto
	
Sleep	Sleep / Timer
Display	Display / Media
Tuner Memory	Zoom / Size
Play Mode/Tuning Mode	TV/Radio /
Folder-	CH- / Page-
Repeat/FM	Picture / Format
Clock/Timer	Up
Clock/Timer Set	Down
Audio In	Audio / Lang I/II
CD	3
Band/Tuner	Shift + TV/Radio / Program
Function	D.Menu / Top
I<</-	I<< / Preset-
>>I/+	>>I / Preset+
<</←	<< / Tune-
>>/→	>> / Tune+

Originale	Sostituto
	
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Clear	Exit / Cancel / Clear
EQ	Subtitle / EQ
Vol+	Vol+
Vol-	Vol-
Enter	OK
Disk Skip	Fav / Marker / PC
Folder+	CH+ / Page+

