









 














 









 


 
 

 





 



 

 





 
























 

 

 


 













Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle/Del	 Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 0/10	 0
 +10	 Fav / Marker / PC
 Video	 Shift + 4

Originale	Sostituto
 Return	 Back / Return
 Mute	 Mute / Dimmer
 N/P	 Red / Netflix / Search
 Time	 Sleep / Timer
 OSD	 Display / Media
 Setup	 Setup / OPT /
 Up	 Up
 Title/TTX	 Text / Goto
 Left/FAV-	 Left
 Enter	 OK
 Right/FAV+	 Right
 Menu/PBC	 Menu / Home
 Down	 Down
 Prog/EPG	 Guide / EPG / -/-
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze





Originale	Sostituto
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Yellow / YouTube / Repeat
	 Green / APP / Repeat
	 Sound / Title
	 +  Shift + Play /
	 Zoom / Size
	 Exit / Cancel / Clear
	 +  Shift + Pause / Step /
	 Rec / Rec Mode
	 TV/Radio /
	 AV / Input / RDS
	 Vol-
	 Vol+

Originale	Sostituto

