


 
 


 


 
 

 
 






 



 
















 



 







 
 
 

 

 




 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		OK		Ok
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		CH+		Ch +
	7		7		CH-		Ch -
	8		8		Stop		Stop
	9		9		Play/Pause		Play
	0		0		Rec		Rec
	Thumb		Guide		>>		>>
	Time Shift		Pre Ch		<<		<<
	Menu		Menu		EPG/BG-Music		Shift + Options
	Exit		Exit		TTX		Text
	Info		Info		Zoom		Eject



