










Originale	Sostituto
 Standby	 Power
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I / II
 Mute	 Mute / Dimmer
 <<<	 <<< / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 I<<<	 I<<< / Preset-
 >>>	 >>> / Tune+
 Stop	 Stop / Hold
 >>>I	 >>>I / Preset+
 Menu	 Menu / Home
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-

Originale	Sostituto
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Record	 Rec / Rec Mode
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 Timeshift	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 --	 Guide / EPG / -/-
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8





Originale		Sostituto	
	9		9
	0		0
	--		Fav / Marker / PC
	Device		Smart / List
	File		Display / Media
	Repeat		Shift + Green / APP / REPEAT
	Teletext		Text / Goto
	Mosaic		Picture / Format
	TV/Radio		TV/Radio /
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originale	Sostituto

