
 
 




 
 




 
 









 

 

 

Originale	Sostituto
	Power
	Mute
	Nicam/A2
	Aspect
	P.Mode
	S.Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Shift + Audio / Lang I/II
	Shift + Picture / Format
	Picture / Format
	Sound / Title
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0

Originale	Sostituto
	Recall
	Display
	Freeze
	Rec/Auto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	Source
	Left
	Enter
	Right
	Down
	Menu
	Exit
	Back / Return
	Display / Media
	Pause / Step / Freeze
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	AV / Input / RDS
	Left
	OK
	Right
	Down
	Menu / Home
	Exit / Cancel / Clear





Originale	Sostituto
 CH+ / Page+	 CH+ / Page+
 Subtitle	 Subtitle / EQ
 Vol+	 Vol+
 CH- / Page-	 CH- / Page-
 T.Shift	 Setup / OPT /
 Vol-	 Vol-
 Play/Pause/Hold	 Play / Slow
 Play/Pause/Hold	 Shift + Stop /
 <</Reveal	 << / Tune-
 >>/Size	 Zoom / Size
 >>/Size	 >> / Tune+
 Stop/Index	 Stop / Hold
 I<<	 I<< / Preset-
 S.Page/>>I	 >>I / Preset+
 Text	 Text / Goto
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II

Originale	Sostituto
 DTV	 Smart / List
 EPG	 Guide / EPG / -/-
 Tv/Radio	 TV/Radio /

