





 

 

 





































Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 Recall	 Back / Return
 Subtl	 Subtitle / EQ
 V.O.	 Sound / Title
 ←	 Eject / Surround

Originale	Sostituto
 Vol+	 Vol+
 Home	 Shift + Menu /
 P+	 CH+ / Page+
 Vol-	 Vol-
 Movie	 Display / Media
 P-	 CH- / Page-
 Mouse	 Smart / List
 ♪	 D.Menu / Top
 16:9	 Picture / Format
 Menu	 Menu / Home
 ↑	 Up
 Source	 AV / Input / RDS
 ←	 Left
 OK	 OK
 →	 Right
 Info	 Info / Angle
 ↓	 Down





Originale	Sostituto
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+
	l<< / Preset-
	Stop / Hold
	>>l / Preset+
	Rec / Rec Mode
	Zoom / Size
	Fav / Marker / PC
	Guide / EPG / -/--
	TV/Radio /

Originale	Sostituto
	Shift + 8



Program