


 


 

 





 



 

 




 



 



 


 


 



 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Display		Info
	Mute		Mute		Sleep		Sleep
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		FAV/List		Shift + Pre Ch
	6		6		Clock		Shift + AV
	7		7		List		List
	8		8		Tv/Radio		TV/R
	9		9		Aspect		Format
	0		0		Freeze		Pause
	-/--		Guide		Index		Options
	Recall		Pre Ch		Cancel		Back
	Menu		Menu		Subpage		Subt
	Source		AV		Text		Text
	Exit		Exit		Size		Eject





	Originale	Sostituto	Originale	Sostituto
	Reveal	 Media		
	Hold	 Dual		
	Mix	 +  Shift + Media		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Cyan	 Blue		
	Nicam	 Smart		
	P.Mode	 +  Shift + Format		
	S.Mode	 +  Shift + Dual		
	OK	 Ok		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		

