





 





 



 





 



 





 

 

 

 

 



 



 

 
 


 
 


 





 







Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Display / Media
	 Guide / EPG / -/--
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS











 

 







 

 



 

Originale	Sostituto
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Smart / List
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-





Originale

Sostituto





 

 

 

 

 

 

 

 

 

 

 



 





	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	Still		Shift + Pause / Step /
	Sound		Sound / Title
	PIP		D.Menu / Top
	Menu		Menu / Home
	HDMI		Shift + 0

 

 

 

 

 



 


 
 

 

 

 
 




 





Originale

Sostituto





Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Fav / Marker / PC
	 Smart / List
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
 Aspect / Zoom	 Zoom / Size
	 0
	 AV / Input / RDS

Originale	Sostituto
	 Setup / OPT /
	 Display / Media
	 TV/Radio /
	 D.Menu / Top
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-







 





 



 





 



 





 



 

 

 

 



 



 

 
 


 
 


 





 





Originale		Sostituto		Originale		Sostituto	
	Stop		Stop / Hold				
	Play / Pause		Play / Slow				
	>>		>> / Tune+				
	Prog -		CH- / Page-				
	Prog +		CH+ / Page+				
	Volume -		Vol-				
	Volume +		Vol+				
	TXT		Text / Goto				
	I> / Still		Pause / Step / Freeze				
	Sound		Sound / Title				
	PIP		Picture / Format				
	Menu		Menu / Home				
	HDMI		Shift + 0				





Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Display / Media
	 Guide / EPG / -/--
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS













 

 




 
 
 

 



 
 
 
Originale	Sostituto
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Smart / List
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-





Originale

Sostituto

	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	Still	 + 	Shift + Pause / Step /
	Sound		Sound / Title
	PIP		D.Menu / Top
	Menu		Menu / Home
	HDMI	 + 	Shift + 0

Originale

Sostituto

