

 

 

 











 











 

 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0	 0
 Stop	 Stop / Hold
 <<<	 <<< / Tune-

Originale	Sostituto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 EPG	 Guide / EPG / -/-
 Up	 Up
 Recall	 Fav / Marker / PC
 I<<<	 I<<< / Preset-
 Left	 Left
 OK	 OK
 Right	 Right
 >>>I	 >>>I / Preset+
 Zurück	 Back / Return
 Down	 Down
 Info	 Info / Angle
 P+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+



