 

 

 




 

 

 

 





























Originale	Sostituto
 On/Standby	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Preset	 Zoom / Size
 Clock	 Shift + Sleep / Timer
 Timer	 AV / Input / RDS
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random

Originale	Sostituto
 Intro	 TV/Radio /
 EQ	 Subtitle / EQ
 Mono/ST	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 I<</<</Tuning	 << / Tune-
 >>/>>/Tuning	 >> / Tune+
 Folder-	 CH- / Page-
 Folder+	 CH+ / Page+
 Preset Up	 >>I / Preset+
 Preset Down	 I<< / Preset-
 Vol+	 Vol+
 Vol-	 Vol-
 Enter	 OK
 CD	 Shift + 3
 USB	 Shift + 8
 Tuner/Dab	 Shift + 6





Originale	Sostituto
AUDIO IN	Audio In
DISPLAY	Display CD/USB
STOP	Stop CD/USB
PLAY/PAUSE	Play/Pause
SCAN	Scan DAB
MENU	Menu DAB
DISPLAY	Display DAB
SCAN	Scan Radio
DISPLAY	Display Radio

Originale	Sostituto

