
 

 


 






| Originale  | Sostituto   |
|--|---|
|  Power                    |  Power         |
|  Power AMP                |  Shift + Power |
|  CD                       |  Red           |
|  Recorder                 |  Green         |
|  Network                  |  Yellow        |
|  Phono                    |  Blue          |
|  AUX                      |  Smart         |
|  Tuner                    |  Media         |
|  Internet Radio Preset 1  |  Shift + 1     |
|  Internet Radio Preset 2  |  Shift + 2     |
|  Internet Radio Preset 3 |  Shift + 3    |
|  Play                   |  Play        |
|  Pause                  |  Pause       |
|  I<<                    |  I<<         |
|  >>I                    |  >>I         |
|  Stop                   |  Stop        |
|  <<                     |  <<          |

| Originale  | Sostituto   |
|--|---|
|  >>                   |  >>      |
|  Preset+              |  Ch +    |
|  Preset-              |  Ch -    |
|  Pure Direct/Favorite |  Pre Ch  |
|  Vol+                 |  Vol +   |
|  Vol-                 |  Vol -   |
|  Mute                 |  Mute    |
|  Info                 |  Info    |
|  Mode                 |  Format  |
|  Source               |  AV      |
|  Menu                |  Menu   |
|  Up                 |  Up    |
|  Down               |  Down  |
|  Right              |  Right |
|  Left               |  Left  |
|  Enter              |  Ok    |
|  1                  |  1     |









| Originale   | Sostituto   |
|---|---|
|  Power     |  Power         |
|  Power AMP |  Shift + Power |
|  CD        |  Red           |
|  Recorder  |  Green         |
|  Network   |  Yellow        |
|  Phono     |  Blue          |
|  AUX       |  Smart         |
|  Tuner     |  Media         |
|  Play      |  Play          |
|  Pause     |  Pause         |
|  I<<      |  I<<          |
|  >>I     |  >>I         |
|  Stop    |  Stop        |
|  <<      |  <<          |
|  >>      |  >>          |
|  Preset+ |  Ch +        |
|  Preset- |  Ch -        |

| Originale  | Sostituto  |
|--|--|
|  Pure Direct/Favorite |  Pre Ch |
|  Vol+                 |  Vol +  |
|  Vol-                 |  Vol -  |
|  Mute                 |  Mute   |
|  Info                 |  Info   |
|  Mode                 |  Format |
|  Source               |  AV     |
|  Menu                 |  Menu   |
|  Up                   |  Up     |
|  Down                 |  Down   |
|  Right               |  Right |
|  Left               |  Left |
|  Enter              |  Ok   |
|  1                  |  1    |
|  2                  |  2    |
|  3                  |  3    |
|  4                  |  4    |



