








 



 

 
 




 



 



 













 



 





 



 

 

 

 

 

 
 


 

 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	Source		AV
	Internet		Smart
	Sleep		Sleep
	Presets		Subt
	Multimedia		Media
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Lang		Dual
	[≡]		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Return		Shift + Back
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit





Originale		Sostituto		Originale	Sostituto
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	P+		Ch +		
	p-		Ch -		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	Wide		Format		
	Folder [*]		Eject		
	i		Info		
	*/o		Options		
	*/o.		3D		
	Text		Text		
	[]≡		Guide		

