



 








 


 
 

 
 



 



 



 



 


 



 

 


 
 
 



 

 
 
 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Blue / Title		Blue
	HDMI Control		D. Menu		1		1
	Record		Rec		2		2
	Play		Play		3		3
	Pause		Pause		4		4
	Stop		Stop		5		5
	I<<		I<<		6		6
	<<		<<		7		7
	>>		>>		8		8
	>>I		>>I		9		9
	Screen		Format		0		0
	Lang		Dual		Text		Text
	Subtitle		Subt		Swap		Pre Ch
	Internet		Media		Up		Up
	Red/Zoom/↑		Red		Down		Down
	Green/Repeat/↓		Green		Right		Right
	Yellow / Root		Yellow		Left		Left





Originale	Sostituto	Originale	Sostituto
OK	OK		
P/Ch+	Ch +		
P/Ch-	Ch -		
Vol+	Vol +		
Vol-	Vol -		
Mute	Mute		
Menu	Menu		
Source	AV		
Return	Back		
Epg	Guide		
Info	Info		
Sleep	Sleep		
3D	3D		
Search Mode	TV/R		
Music/Movie/Phot	Smart		
Display	Shift + Info		
Presets	Options		

