


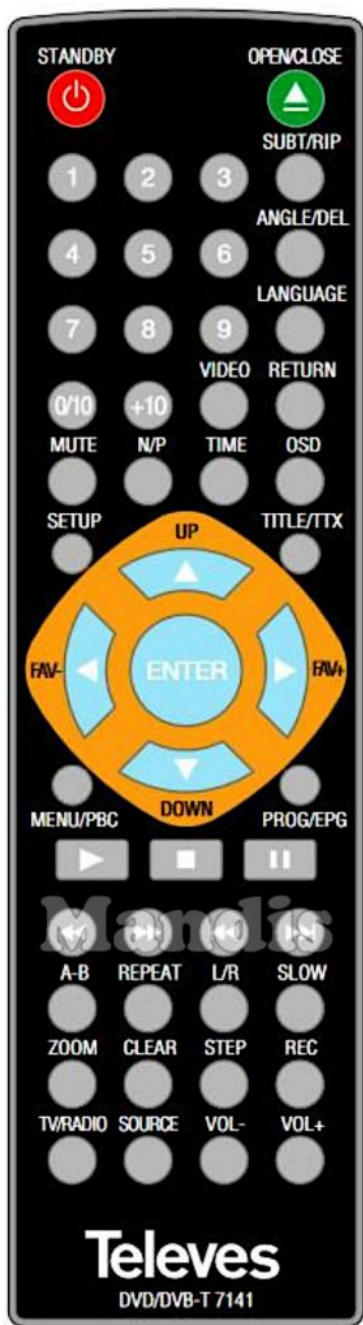












 














Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Language	 Audio / Lang I/II
 SUBT / RIP	 Subtitle / EQ
 Open / Close	 Eject / Surround
 Zoom	 Zoom / Size
 Time	 Sleep / Timer
 TV / Radio	 TV/Radio /
 Setup	 Setup / OPT /

Originale	Sostituto
 Title / TTX	 Text / Goto
 Source	 AV / Input / RDS
 Menu / PBC	 Menu / Home
 Up	 Up
 Left / Fav-	 Left
 Enter	 OK
 Right / Fav+	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 L/R	 Smart / List
 Vol-	 Vol-
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3





Originale	Sostituto
	VIDEO 
	TAPE 
	TUNER 
	AUX - HDD 
	USB 
	BLUETOOTH 
	GUIDE EPG 
	HDMI - BAT 
REPEAT	 Green / APP / Repeat
A-B	 Yellow / YouTube / Repeat
SLOW	 Shift + Play /
STEP	 Shift + Pause / Step /
PROG/EPG	 Shift + TV/Radio / Program
ANGLE/DEL	 Shift + Back / Return
N/P	 Shift + Display / Media
VIDEO	 Shift + 4
PROG/EPG	 Shift + Guide / EPG / -/-

Originale	Sostituto

