





























 











 

Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Nicam	 Setup / OPT /

Originale	Sostituto
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Info	 Info / Angle
 CH-	 CH- / Page-
 Vol-	 Vol-
 Media	 Display / Media
 Freeze	 Shift + Pause / Step /
 Aspect	 Shift + Picture / Format
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Hold	 Stop / Hold
 <<	 << / Tune-
 Size	 Zoom / Size
 >>/Reveal	 >> / Tune+
 I<</Index	 I<< / Preset-
 >>I/Subpage	 >>I / Preset+
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Rec	 Rec / Rec Mode
 R.List	 Smart / List
 TV/Radio	 TV/Radio /
 Timeshift	 D.Menu / Top
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

