




 

 
 
 
 
 

 

 





 
 

 














Originale	Sostituto	Originale	Sostituto
	Source		AV
	Power		Power
	TV		TV/R
	-[/]-		Sleep
	[<>]		Format
	O)I/II		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AD		Shift + Subt

Originale	Sostituto	Originale	Sostituto
	0		0
	Recall		Pre Ch
	Vol+		Vol +
	[i+]		Info
	P+		Ch +
	Vol-		Vol -
	Mute		Mute
	P-		Ch -
	Quick		Smart
	[.]		Shift + Options
	[>]		Options
	Text		Text
	List		List
	Menu		Menu
	↑ ↑		Shift + Up
	Guide		Guide
	Up		Up





Originale		Sostituto		Originale		Sostituto	
	<<	 + 	Shift + Left		Green		Green
	Left		Left		Yellow		Yellow
	OK		Ok		Blue		Blue
	Right		Right				
	>>	 + 	Shift + Right				
	Back		Back				
	Down		Down				
	Exit		Exit				
	↓↓	 + 	Shift + Down				
	<</[≡+]		<<				
	Play		Play				
	>>/[≡◇]		>>				
	I<</[≡?]		I<<				
	Stop		Stop				
	Pause/Step		Pause				
	>>I/[O]/[≡x]		>>I				
	Red		Red				

