








| Originale | Sostituto |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  Prog |  TV/Radio / |
|  I-II |  Audio / Lang I/II |
|  O to O |  Sound / Title |
|  PP |  Back / Return |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -- |  Guide / EPG / -- |

| Originale | Sostituto |
|--|---|
|  ZAP |  Smart / List |
|  Up / P+ |  Up |
|  Up / P+ |  CH+ / Page+ |
|  Right / Vol+ |  Right |
|  Right / Vol+ |  Vol+ |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol- |
|  Normal |  OK |
|  Down / P- |  Down |
|  Down / P- |  CH- / Page- |
|  Red / Memo |  Red / Netflix / Search |
|  Green / Audio |  Green / APP / Repeat |
|  Green / Audio |  Shift + Audio / Lang I/II |
|  Yellow / Video |  Yellow / YouTube / Repeat |
|  Blue / Extra |  Blue / Prime Video / Random |
|  [] |  Display / Media |
|  [+] |  Stop / Hold |



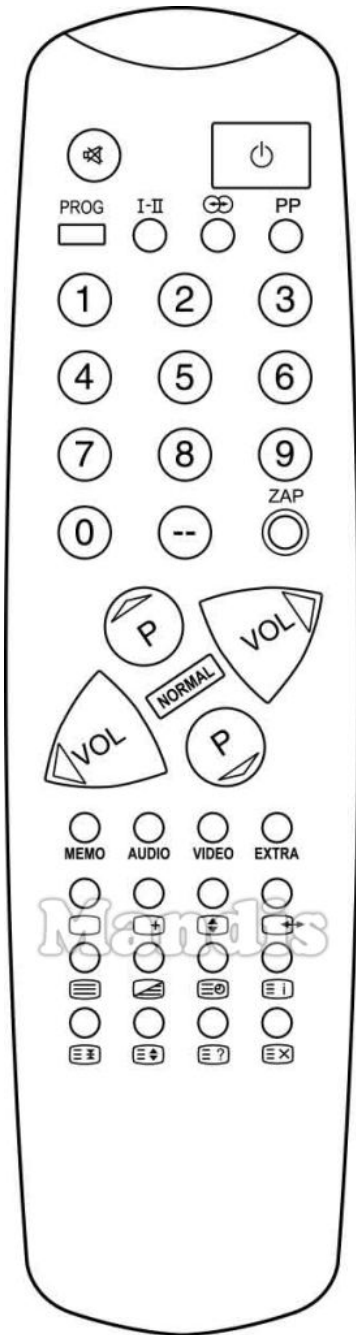

| Originale | Sostituto |
|-----------|--|
| [⬢] | OPT-TOOLS SETUP Setup / OPT / |
| []↔ | TOP MENU D.MENU D.Menu / Top |
| [≡] | GOTO TEXT Text / Goto |
| [≡ ⬢] | SHIFT + GOTO TEXT Shift + Text / |
| [≡ ⦿] | EQ SUBTITLE Subtitle / EQ |
| [≡ i] | ANGLE INFO Info / Angle |
| [≡ □] | STEP-FREEZE Pause / Step / Freeze |
| [≡ ⬢] | SIZE ZOOM Zoom / Size |
| [≡ ?] | RDS AV INPUT AV / Input / RDS |
| [≡ X] | CLEAR EXIT Exit / Cancel / Clear |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

