









| Originale | Sostituto | Originale | Sostituto |
|--|---|--|--|
|  Power |  Power |  Left |  Left |
|  Mute |  Mute / Dimmer |  OK |  OK |
|  1 |  1 |  Right |  Right |
|  2 |  2 |  Sel |  Smart / List |
|  3 |  3 |  Down |  Down |
|  4 |  4 |  FAV |  Fav / Marker / PC |
|  5 |  5 |  Audio |  Audio / Lang I/II |
|  6 |  6 |  Pause |  Pause / Step / Freeze |
|  7 |  7 |  Red/Subtitle |  Red / Netflix / Search |
|  8 |  8 |  AV |  AV / Input / RDS |
|  9 |  9 |  TV/R |  TV/Radio / |
|  Quality/P- |  CH- / Page- |  Blue/Info |  Blue / Prime Video / Random |
|  0 |  0 |  Green/PIP |  Green / APP / Repeat |
|  Recall/P+ |  CH+ / Page+ |  Yellow/EPG |  Yellow / YouTube / Repeat |
|  Menu |  Menu / Home | | |
|  Exit |  Exit / Cancel / Clear | | |
|  Up |  Up | | |

| Originale | Sostituto | Originale | Sostituto |
|---|---|--|---|
|  DIMMER MUTE |  SHIFT |  TV |  DVD |
|  SLOW |  STEP - FREEZE |  HOLD |  REC MODE |
|  TUNE- |  TUNE+ |  PRESET- |  PRESET+ |
|  TITLE |  LANG I/II |  EQ |  SURROUND |
|  SOUND |  AUDIO |  SUBTITLE |  PROGRAM |
|  FORMAT |  ZOOM |  SLEEP |  TV RADIO |
|  TOP MENU |  OPT-TOOLS |  GOTO |  RDS |
|  D.MENU |  SETUP |  TEXT |  AV INPUT |
|  HOME |  ANGLE |  MENU |  INFO |
|  CLEAR |  OK |  RETURN |  BACK |
|  EXIT |  CANCEL |  LIST |  SMART |
|  VOL + |  MEDIA |  CH PAGE + |  CH PAGE + |
|  VOL - |  DISPLAY |  TV |  DVD |
|  4 |  TAPE |  CD - STB |  TUNER |
|  5 |  AUX - HDD |  USB |  BLUETOOTH |
|  6 |  HDMI - SAT |  PC |  FAV MARKER |
|  7 |  GUIDE EPG |  NETFLIX |  APP |
|  8 |  REPEAT |  YouTube |  Prime Video |
|  9 |  REPEAT A-B |  SEARCH |  REPEAT |
|  0 |  RANDOM |  REPEAT A-B |  RANDOM |

