



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Page+	 >>
 Mute	 Mute	 Page-	  <<
 TV / AV	 AV	 ←PR	 Back
 TV / Radio	 TV/R	 Up / PR+	 Up
 TXT	 Text	 Up / PR+	 Ch +
 SAT / Scan	 Media	 Down / PR-	 Down
 EPG	 Guide	 Down / PR-	 Ch -
 1	 1	 Right / Vol+	 Right
 2	 2	 Right / Vol+	 Vol +
 3	 3	 Left / Vol-	 Left
 4	 4	 Left / Vol-	 Vol -
 5	 5	 OK	 Ok
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Fav	 Pre Ch
 9	 9	 Info	 Info
 0	 0	 Pause	 Pause

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 TV	 DVD
 TV / AV	 SAT	 AUX	 REC MODE
 TV / Radio	 AV	 PLAY MODE	 PAUSE
 TXT	 TV/R	 STOP	 RECORD
 SAT / Scan	 TEXT	 SKIP BACKWARD	 SKIP FORWARD
 EPG	 MEDIA	 DISC NAV	 SOUND
 1	 GUIDE	 AD	 SETTINGS
 2	 1	 LIST	 DUAL
 3	 2	 SUBT	 OPT
 4	 3	 PROG	 SEARCH
 5	 4	 PICTURE	 ECO
 6	 5	 SLEEP	 TV/R
 7	 6	 FORMAT	 3D
 8	 7	 E-MANUAL	 REPEAT
 9	 8	 ZOOM	 TIMER
 0	 9	 D.MENU	 TEXT
		 UP	 AV
		 TOP MENU	 DISPLAY
		 MENU	 INFO
		 OK	 EXIT
		 EXIT	 RETURN
		 VOL+	 BACK
		 VOL+	 HOME
		VOL-	SMART
		VOL-	APP
		OK	MEDIA
		MENU	CH+
		EXIT	CH-
		FAV	HOME
		INFO	SMART
		PAUSE	APP
			MEDIA
			CH+
			CH-
			1
			2
			3
			4
			5
			6
			7
			8
			9
			0
			GUIDE
			FAV
			PRE-CH
			A
			B
			C
			D
			 Mandis SHOP
			 www.mandis.tv



