 





 

 

 





 

 



 





 

 

 





Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Sleep	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 Still	 Eject / Surround
 7	 7
 8	 8
 9	 9
 Aspect	 Zoom / Size
 -/--	 Guide / EPG / -/--
 0	 0
 Prev. Ch.	 Back / Return

Originale	Sostituto
 Source	 AV / Input / RDS
 Vol -	 Vol-
 Vol +	 Vol+
 CH -	 CH- / Page-
 CH +	 CH+ / Page+
 Info	 Info / Angle
 Nicam/A2 / Audio	 Audio / Lang I/II
 Auto	 Setup / OPT /
 P.Mode	 Picture / Format
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 S.Mode	 Sound / Title
 Down	 Down
 Exit	 Exit / Cancel / Clear





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search		DTV / Radio		TV/Radio /
	Green		Green / APP / Repeat		DTV		D.Menu / Top
	Yellow		Yellow / YouTube / Repeat		REC / Repeat		Rec / Rec Mode
	Blue		Blue / Prime Video / Random				
	I<< / Index		I<< / Preset-				
	>>I / Cancel		>>I / Preset+				
	<< / Reveal		<< / Tune-				
	>> / Hold		>> / Tune+				
	Txt		Text / Goto				
	Play/Pause / Size		Play / Slow				
	Play/Pause / Size		Pause / Step / Freeze				
	Stop / Subpage		Stop / Hold				
	Subtitle		Subtitle / EQ				
	Rec Menu		Shift + Rec / Rec Mode				
	CH List		Smart / List				
	FAV		Fav / Marker / PC				
	USB		Shift + 8				

