






 
 

 

 


 


 
 
 

 
 
 


 







 
 

 
 




 



 

 

 
 

 



 




 


 






 
 
 








 
 



 

 

 

 


 






| Originale | Sostituto | Originale | Sostituto |
|---|--|---|---|
|  Power |  Power |  +/- |  Shift + Guide / EPG / +/- |
|  Mute |  Mute / Dimmer |  Recall |  Back / Return |
|  Aspect |  Shift + Picture / Format |  Red |  Red / Netflix / Search |
|  P.Mode |  Picture / Format |  Green |  Green / APP / Repeat |
|  S.Mode |  Sound / Title |  Yellow |  Yellow / YouTube / Repeat |
|  Audio / Nicam |  Audio / Lang I/II |  Blue |  Blue / Prime Video / Random |
|  Sleep |  Sleep / Timer |  Source |  AV / Input / RDS |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  Menu |  Menu / Home |
|  3 |  3 |  Left |  Left |
|  4 |  4 |  Enter |  OK |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Vol + |  Vol+ |
|  8 |  8 |  Exit |  Exit / Cancel / Clear |
|  9 |  9 |  CH + |  CH+ / Page+ |
|  0 |  0 |  Vol - |  Vol- |





| Originale | Sostituto |
|---|--|
|  Display |  Display / Media |
|  CH - |  CH- / Page- |
|  TXT |  Text / Goto |
|  Index |  Setup / OPT / |
|  Hold |  Shift + Stop / |
|  Mix |  Shift + Text / |
|  Subpage |  Eject / Surround |
|  Reveal / Subtitle |  Subtitle / EQ |
|  Size |  Zoom / Size |
|  Rec / Goto / |  Rec / Rec Mode |
|  EPG |  Guide / EPG / -/-- |
|  List |  Smart / List |
|  TV / Radio |  TV/Radio / |
|  FAV |  Fav / Marker / PC |
|  Play / Pause |  Play / Slow |
|  Play / Pause |  Shift + Play / |
|  Stop |  Stop / Hold |

| Originale | Sostituto |
|--|---|
|  PVR Menu |  D.Menu / Top |
|  Media |  Shift + Display / Media |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
| << button icon" data-bbox="511 338 541 381"/> << |  << / Tune- |
|  >> |  >> / Tune+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

