 

 
 





 

 



 
 



 
 
 

 

 

 

 

 
 
 

 
 
 

 

 

 
 
 
 
 
 

 
 
 
 



Originale	Sostituto
 Power	 Power
 Nicam/Eject	 Eject
 Mute	 Mute
 Display	 Shift + Info
 Sleep	 Sleep
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch

Originale	Sostituto
 Recall	 Back
 Tv-Menu	 Menu
 Source	 AV
 DVD Setup	 Options
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Red/Repeat	 Red
 Green/Zoom	 Green
 Yellow/Angle	 Yellow
 Blue/Goto	 Blue
 Text/Audio	 Text
 Tv/Radio/Menu	 TV/R
 Exit	 Exit
 P.Mode	 Shift + Format





Originale		Sostituto		Originale		Sostituto	
	S.Mode		Dual		Info/Title		Info
	Vol+		Vol +				
	Vol-		Vol -				
	CH+		Ch +				
	CH-		Ch -				
	I<</Index		I<<				
	Play/Reveal		Play				
	Pause		Pause				
	>>I/Subpage		>>I				
	<<		<<				
	Stop/Size		Stop				
	>>		>>				
	Hold/A-B/Rec List		List				
	Rec/Slow		Rec				
	Time Shift		Smart				
	EPG/Program		Guide				
	Subtitle		Subt				

