














 





 





 










 


 




 

 





 





 

 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Rec		Rec
	Home		Smart		Stop		Stop
	1		1		Pause		Pause
	2		2		Play		Play
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Setup		Options
	6		6		I<< Prev		I<<
	7		7		>>I Next		>>I
	8		8		<< FR		<<
	9		9		>> FF		>>
	0		0		Up		Up
	Goto		List		Left		Left
	Mute		Mute		Enter		Ok
	Display		Info		Right		Right
	Audio		Dual		Down		Down
	Subtitle		Subt		Browser		Media





Originale		Sostituto		Originale	Sostituto
	Return		Back		
	Red / Slow		Red		
	Green / TimeShift		Green		
	Yellow / CM Skip		Yellow		
	Blue / Replay		Blue		
	Repeat		Text		
	Zoom		Eject		
	Copy		3D		
	TV System		TV/R		
	Source		AV		
	EPG		Guide		
	Edit		Format		
	Timer	+	Shift + AV		

