


 



 
 
 



 

 




 





	Originale	Sostituto		Originale	Sostituto
POWER	Power		Power	MAIN PAGE	Main Page
MENU	Menu		Menu	PLAY/PAUSE	Play
TITLE	Title		List	PLAY/PAUSE	Pause
SETUP	Setup		Options	STOP	Stop
ANGLE	Angle		Red	REW	<<
REPEAT	Repeat		Text	FF	>>
A-B REPEAT	A-B Repeat		TV/R	PREV	I<<
SLOW	Slow		Pre Ch	NEXT	>>I
FILE INFO	File Info		Info	VIDEO	Video
TIME SEARCH	Time Search		AV	AUDIO	Audio
Brt. CONT.	Brt Cont.		Green	SUBTITLE	Subtitle
MEDIA TYPE	Media Type		Media	Scr.SIZE	Scr Size
Up	Up		Up	Vol+	Vol +
Down	Down		Down	Vol-	Vol -
Right	Right		Right	MUTE	Mute
Left	Left		Left	1	1
ENTER	Enter		Ok	2	2

	Originale	Sostituto		Originale	Sostituto
HOME	Smart		Smart	TV	TV
PLAY MODE	Play		Play	DVD	DVD
PLAY/PAUSE	Pause		Pause	SAT	SAT
STOP	Stop		Stop	AUX	AUX
REW	<<		<<	REC MODE	REC MODE
FF	>>		>>	TV	TV
PREV	I<<		I<<	II	II
NEXT	>>I		>>I	III	III
VIDEO	Video		Yellow	DISC NAV	DISC NAV
AUDIO	Audio		Dual	SOUND	SOUND
SUBTITLE	Subtitle		Subt	AD	AD
Scr.SIZE	Scr Size		Format	SETTINGS	SETTINGS
Vol+	Vol +		Vol +	LIST	LIST
Vol-	Vol -		Vol -	DUAL	DUAL
MUTE	Mute		Mute	SUBT	SUBT
1	1		1	OPT	OPT
2	2		2	PROG	PROG





	Originale	Sostituto	Originale	Sostituto
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Cancel			Exit

