



































Originale	Sostituto	Originale	Sostituto
Power	 Power	Setup	 Setup / OPT /
Mute	 Mute / Dimmer	Subtitle	 Subtitle / EQ
Menu	 Menu / Home	Vol+	 Vol+
Exit	 Exit / Cancel / Clear	Vol-	 Vol-
1	 1	>>	 >> / Preset+
2	 2	<<	 << / Preset-
3	 3	Up	 Up
4	 4	Left	 Left
5	 5	OK	 OK
6	 6	Right	 Right
7	 7	Down	 Down
8	 8	Canc	 Back / Return
9	 9	DVI	 AV / Input / RDS
0	 0	Info	 Info / Angle
+10	 Guide / EPG / -/--	Title	 Sound / Title
Display	 Display / Media	Bookmark	 Fav / Marker / PC
Zoom	 Zoom / Size	Eject	 Eject / Surround



Originale	Sostituto	Originale	Sostituto
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Angle	 +  Shift + Info / Angle		
<<	 << / Tune-		
Play	 Play / Slow		
>>	 >> / Tune+		
Audio	 Audio / Lang I/II		
PSM	 Picture / Format		
Keyboard	 Smart / List		
I-Scan	 CH+ / Page+		
P-Scan	 CH- / Page-		
P/N	 D.Menu / Top		
Slow	 +  Shift + Play /		
Repeat	 Green / APP / Repeat		
Repeat A-B	 Yellow / YouTube / Repeat		

