



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Display		Display / Media		Down		Down
	Setup		Setup / OPT /		1		1
	Mute		Mute / Dimmer		2		2
	Menu		Menu / Home		3		3
	Music		Red / Netflix / Search		4		4
	Copy		Info / Angle		5		5
	Zoom		Zoom / Size		6		6
	Tv System		TV/Radio /		7		7
	Browser		D.Menu / Top		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		Time Shift		Sound / Title
	Guide		Guide / EPG / -/-		0		0
	Return		Back / Return		Goto		Text / Goto
	Up		Up		Rec		Rec / Rec Mode
	Left		Left		Play		Play / Slow
	OK		OK		Stop		Stop / Hold





Originale	Sostituto	Originale	Sostituto
 Timer	 Sleep / Timer		
 Pause/Step	 Pause / Step / Freeze		
 I>/Slow	 Fav / Marker / PC		
 I<</Prev	 I<< / Preset-		
 ReclList	 Smart / List		
 ←/INS Replay	 CH- / Page-		
 →/CM Skip	 CH+ / Page+		
 >>I/Next	 >>I / Preset+		
 A-B	 Yellow / YouTube / Repeat		
 Subtitle	 Subtitle / EQ		
 Repeat	 Green / APP / Repeat		
 <</FR	 << / Tune-		
 F1	 Blue / Prime Video / Random		
 Source	 AV / Input / RDS		
 Audio	 Audio / Lang I/II		
 >>/FF	 >> / Tune+		

Originale	Sostituto

