



Originale	Sostituto
 Power Receiver	 Power
 Power Source	 +  Shift + Power
 HDMI 1	 +  Shift + 1
 HDMI 2	 +  Shift + 2
 HDMI 3	 +  Shift + 3
 HDMI 4	 +  Shift + 4
 HDMI 5	 +  Shift + 5
 HDMI 6	 +  Shift + 6
 HDMI 7	 +  Shift + 7
 V-AUX	 +  Shift + 8
 AV 1	 +  Shift + 9
 AV 2	 +  Shift + Guide
 AV 3	 +  Shift + 0
 AV 4	 +  Shift + Pre Ch
 AV 5	 +  Shift + Smart
 AV 6	 +  Shift + Media
 Audio	 Dual

Originale	Sostituto
 Tuner	 TV/R
 Bluetooth	 Red
 USB	 Green
 Net	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 Media
 BD/DVD	 Text
 TV	 Subt
 Net	 AV
 Radio	 D. Menu
 Program Up	 Ch +
 Program Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Top Menu	 +  Shift + Menu





Originale	Sostituto
 Pop-Up Menu	 Menu
 On Screen	 Eject
 Option	 Options
 Return	 Back
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Format
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<

Originale	Sostituto
 Preset >>I	 >>I
 Movie	 Shift + Subt
 Music	 3D
 Sur Decode	 Shift + Text
 Straight	 Shift + AV
 Info	 Info
 Sleep	 Sleep
 Enhancer	 List
 Pure Direct	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale

Sostituto

	9		9
	0		0
	+10/Memory		Guide
	ENT		Pre Ch

Originale

Sostituto



 





 
 





 

 





 

 

 











 
 


 





 











 




 
 
Originale	Sostituto
 Power Receiver	 Power
 Power Source	 +  Shift + Power
 HDMI 1	 +  Shift + 1
 HDMI 2	 +  Shift + 2
 HDMI 3	 +  Shift + 3
 HDMI 4	 +  Shift + 4
 HDMI 5	 +  Shift + 5
 HDMI 6	 +  Shift + 6
 HDMI 7	 +  Shift + 7
 V-AUX	 +  Shift + 8
 AV 1	 +  Shift + 9
 AV 2	 +  Shift + Guide
 AV 3	 +  Shift + 0
 AV 4	 +  Shift + Pre Ch
 AV 5	 +  Shift + Smart
 AV 6	 +  Shift + Media
 Audio	 Dual

Originale	Sostituto
 Tuner	 TV/R
 Bluetooth	 Red
 USB	 Green
 Net	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 Media
 BD/DVD	 Text
 TV	 Subt
 Net	 AV
 Radio	 D. Menu
 Program Up	 Ch +
 Program Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Top Menu	 +  Shift + Menu





Originale	Sostituto
 Pop-Up Menu	 Menu
 On Screen	 3D
 Option	 Options
 Return	 Back
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Format
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<

Originale	Sostituto
 Preset >>I	 >>I
 Info	 Info
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 Guide
 ENT	 Pre Ch

