

 
 








Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timeshift	 Sleep
 Recall	 Back
 Mark	 Options
 Tv/Radio	 TV/R
 Source	 AV

Originale	Sostituto
 Info	 Info
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 EPG	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Rec	 Rec
 I<<	 I<<





Originale	Sostituto
>>	>>
Audio/Lang	Dual
Page Up	Shift + Ch +
Page Down	Shift + Ch -
Vol+	Vol +
Vol-	Vol -
CH+	Ch +
CH-	Ch -
HDMI	Media
Subtitle	Subt
VCR	Smart
Auto/Goto	3D
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto

