





 





 



 


















 



 
 
 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Home	 D.Menu / Top
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Netflix	 Shift + Red / Netflix /
 6	 6	 Vol+	 Vol+
 7	 7	 Info	 Info / Angle
 8	 8	 PR+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 CH List	 Smart / List	 EPG	 Guide / EPG / -/-
 0	 0	 PR-	 CH- / Page-
 Return/Back	 Back / Return	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Nicam I/II	 Audio / Lang I/II
 Up	 Up	 Text	 Text / Goto
 Source	 AV / Input / RDS	 AD/Subpage	 Sound / Title

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Home	 D.Menu / Top
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Netflix	 Shift + Red / Netflix /
 6	 6	 Vol+	 Vol+
 7	 7	 Info	 Info / Angle
8	8	PR+	CH+ / Page+
9	9	Vol-	Vol-
CH List	Smart / List	EPG	Guide / EPG / -/-
0	0	PR-	CH- / Page-
Return/Back	Back / Return	Rec	Rec / Rec Mode
Menu	Menu / Home	Nicam I/II	Audio / Lang I/II
Up	Up	Text	Text / Goto
Source	AV / Input / RDS	AD/Subpage	Sound / Title



