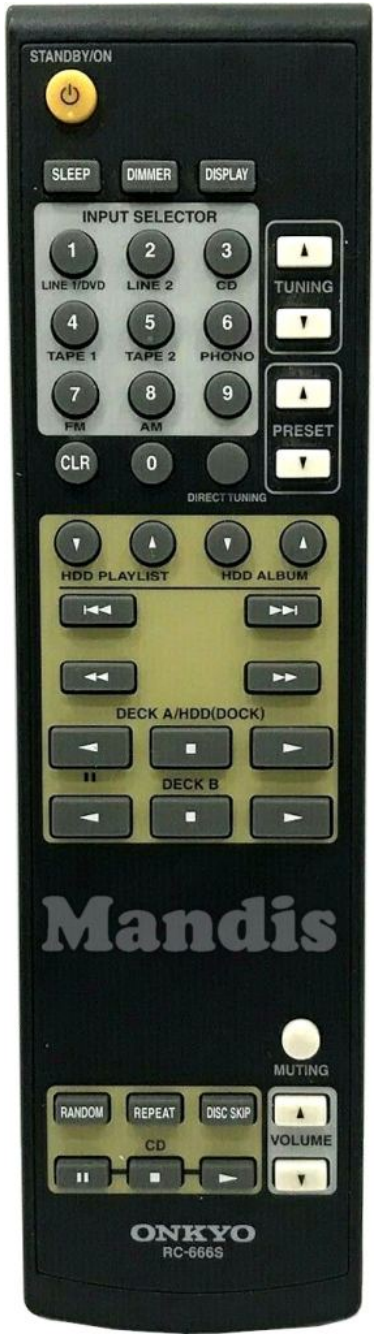

Originalfernbedienung		Ersatzfernbedienung	
STANDBY/ON	STANDBY/ON	Power	
SLEEP	SLEEP	Sleep / Timer	
DIMMER	DIMMER	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
DISPLAY	DISPLAY	MEDIA DISPLAY	Display / Media
1 LINE 1/DVD	1 LINE 1/DVD	TV 1	1
2 LINE 2	2 LINE 2	DVD 2	2
3 CD	3 CD	CD-STB 3	3
TUNING UP	TUNING	+ CH PAGE	CH+ / Page+
4 TAPE 1	4 TAPE 1	VIDEO 4	4
5 TAPE 2	5 TAPE 2	TAPE 5	5
6 PHONO	6 PHONO	TUNER 6	6
TUNING DOWN	TUNING	CH PAGE −	CH- / Page-
7 FM	7 FM	AUX-HDD 7	7
8 AM	8 AM	USB 8	8
9	9	BLUETOOTH 9	9
PRESET UP	PRESET	SHIFT + PRESET+ ⏭	Shift + >>I / Preset+
CLR	CLR	CLEAR EXIT CANCEL	Exit / Cancel / Clear

Originalfernbedienung		Ersatzfernbedienung	
0	0	HDMI-SAT 0	0
DIRECT TUNING	DIRECT TUNING	TOP MENU D.MENU	D.Menu / Top
PRESET	PRESET DOWN	SHIFT + PRESET- ⏮	Shift + I<< / Preset-
HDD PLAY	HDD PLAY LIST	SHIFT + ▼	Shift + Down
HDD PLAYLIST	HDD PLAYLIST	SHIFT + ▲	Shift + Up
HDD ALBUM	HDD ALBUM	▼	Down
HDD ALBUM	HDD ALBUM UP	▲	Up
⏮	I<<	PRESET- ⏮	I<< / Preset-
⏭	>>I	PRESET+ ⏭	>>I / Preset+
◀◀	<<	TUNE- ◀◀	<< / Tune-
▶▶	>>	TUNE+ ▶▶	>> / Tune+
DECK A/HDD(DOCK) ◀ ⏸	PAUSE	STEP-FREEZE ⏸	Pause / Step / Freeze
DECK A/HDD(DOCK) ◀ ⏸	PLAY < DECK A/HDD DOCK	SHIFT + TUNE- ◀◀	Shift + << /
DECK A/HDD(DOCK) ■	STOP DECK A/HDD DOCK	REC MODE ●	Rec / Rec Mode
DECK A/HDD(DOCK) ▶	PLAY > DECK A/HDD DOCK	SLOW ▶	Play / Slow
◀	PLAY < DECK B	TITLE SOUND	Sound / Title
DECK B ■	STOP DECK B	HOLD ■	Stop / Hold

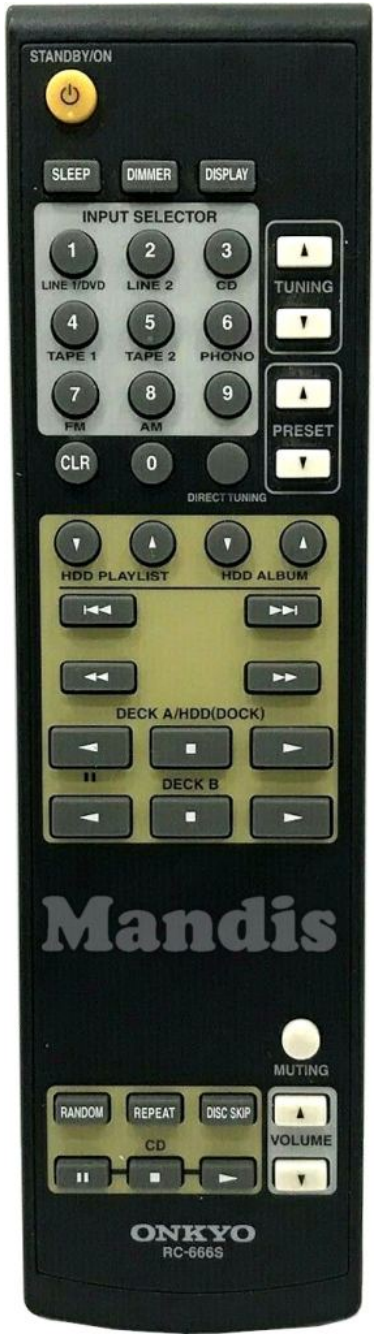

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PLAY > DECK B	SHIFT + TUNE+		
MUTING	DIMMER MUTE		
RANDOM	Prime Video RANDOM		
REPEAT	APP REPEAT		
DISC SKIP	RETURN BACK		
VOLUME	VOL +		
CD PAUSE	SHIFT + STEP-FREEZE		
CD STOP	SHIFT + HOLD		
CD PLAY	SHIFT + SLOW		
VOLUME	VOL -		