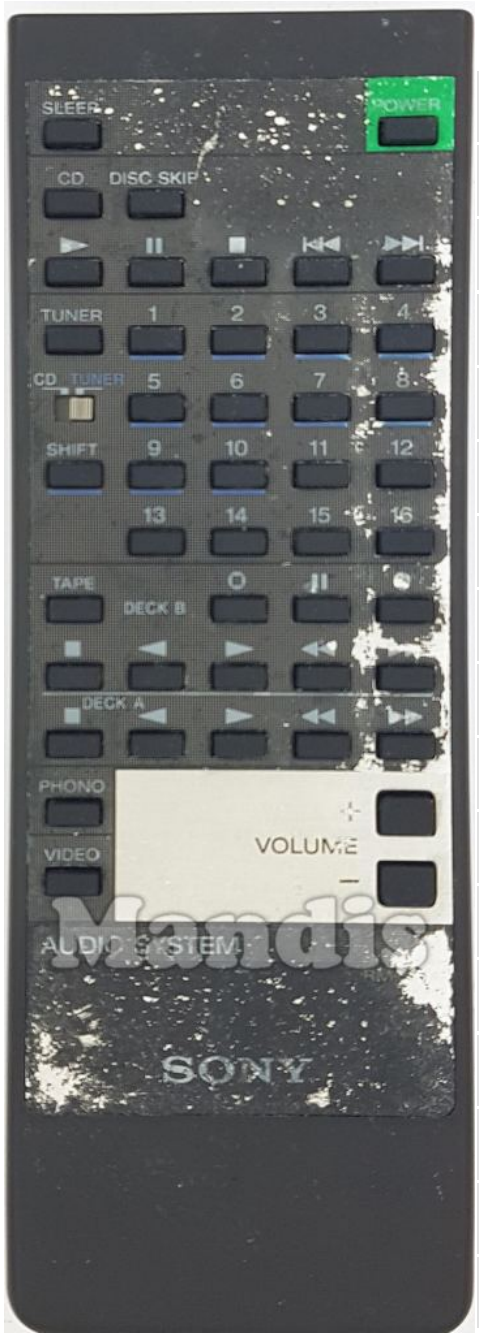

Original		Replacement	
POWER	Power	POWER	Power
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
PHONO	Phono	NETFLIX SEARCH	Red / Netflix / Search
VIDEO	Video	Prime Video RANDOM	Blue / Prime Video / Random
TAPE	Tape	APP REPEAT	Green / APP / Repeat
TUNER	Tuner	PROGRAM TV/RADIO	TV/Radio /
CD	CD	YouTube REPEAT A-B	Yellow / YouTube / Repeat
VOL+	Volume+	VOL +	Vol+
VOL-	Volume-	VOL -	Vol-
DISC SKIP	Disc Skip	SIZE ZOOM	Zoom / Size
▶	Play CD	SLOW ▶	Play / Slow
⏸	Pause CD	STEP-FREEZE ⏸	Pause / Step / Freeze
■	Stop CD	HOLD ■	Stop / Hold
⏮	I<< CD	PRESET- ⏮	I<< / Preset-
⏭	>>I CD	PRESET+ ⏭	>>I / Preset+
1	1 Tuner	TV 1	1
2	2 Tuner	DVD 2	2

Original		Replacement	
3	3 Tuner	CD-STB 3	3
4	4 Tuner	VIDEO 4	4
5	5 Tuner	TAPE 5	5
6	6 Tuner	TUNER 6	6
7	7 Tuner	AUX-HDD 7	7
8	8 Tuner	USB 8	8
9	9 Tuner	BLUETOOTH 9	9
10	10 Tuner	HDMI-SAT 0	0
SHIFT	Shift	LIST SMART	Smart / List
1	1 CD	SHIFT + TV 1	Shift + 1
2	2 CD	SHIFT + DVD 2	Shift + 2
3	3 CD	SHIFT + CD-STB 3	Shift + 3
4	4 CD	SHIFT + VIDEO 4	Shift + 4
5	5 CD	SHIFT + TAPE 5	Shift + 5
6	6 CD	SHIFT + TUNER 6	Shift + 6
7	7 CD	SHIFT + AUX-HDD 7	Shift + 7
8	8 CD	SHIFT + USB 8	Shift + 8

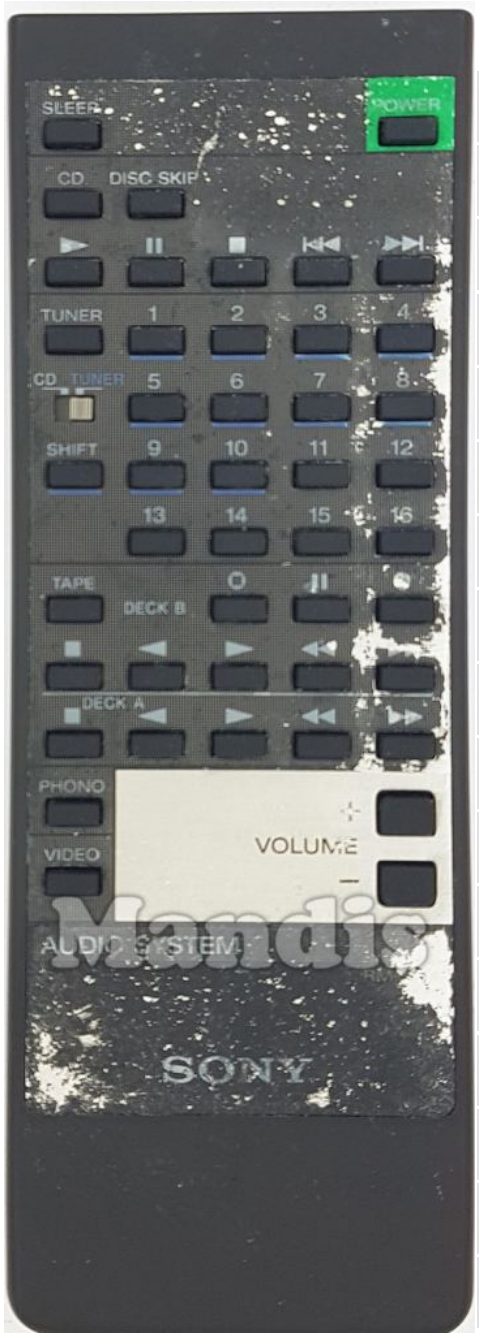

Original	Replacement
9 CD	SHIFT + BLUETOOTH 9 — Shift + 9
10 CD	SHIFT + HDMI - SAT 0 — Shift + 0
11 CD	-/-- GUIDE EPG — Guide / EPG / -/--
12 CD	PC FAV MARKER — Fav / Marker / PC
13 CD	SHIFT + -/-- GUIDE EPG — Shift + Guide / EPG / -/--
14 CD	SHIFT + PC FAV MARKER — Shift + Fav / Marker / PC
15 CD	MEDIA DISPLAY — Display / Media
16 CD	SHIFT + MEDIA DISPLAY — Shift + Display / Media
Stop Deck A	SHIFT + HOLD ■ — Shift + Stop /
<< Deck A	TUNE- ◀◀ — << / Tune-
>> Deck A	TUNE+ ▶▶ — >> / Tune+
> Deck A	Right
< Deck A	Left
Pause Deck B	SHIFT + STEP - FREEZE ⏸ — Shift + Pause / Step /
Rec Pause Deck B	SHIFT + REC MODE ● — Shift + Rec / Rec Mode
Rec Deck B	REC MODE ● — Rec / Rec Mode
Stop Deck B	OK — OK

Original	Replacement
> Deck B	Up
< Deck B	Down
<< Deck B	CH PAGE − — CH- / Page-
>> Deck B	+ CH PAGE — CH+ / Page+