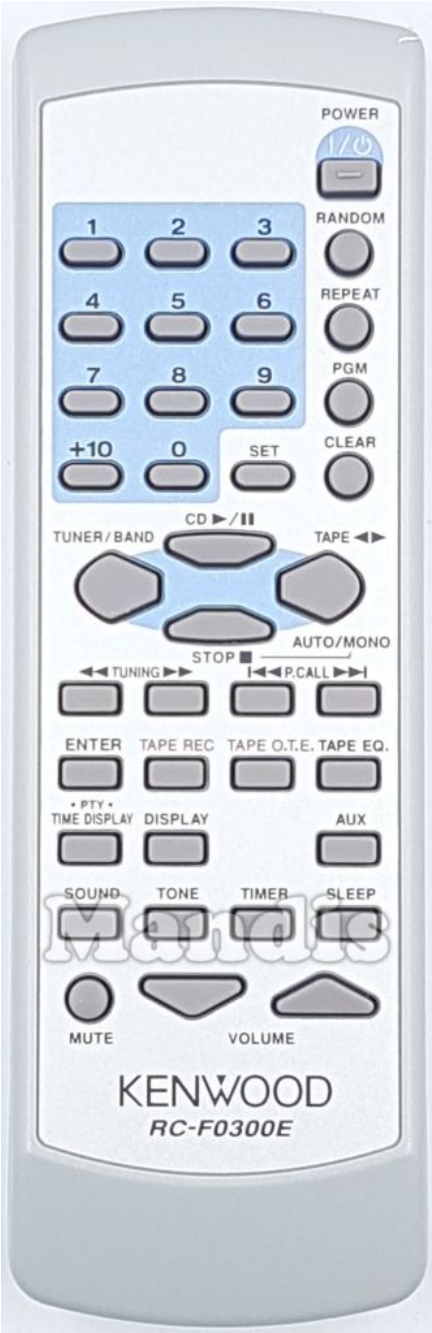

Original	Replacement	Original	Replacement
Power	Power	PTY/Time Display	Text / Goto
Mute	Mute / Dimmer	Set	Menu / Home
Play/Pause CD	Play / Slow	Enter	OK
<> Tape	Pause / Step / Freeze	Clear	Exit / Cancel / Clear
Stop/Auto/Mono	Stop / Hold	Volume+	Vol +
Tape Rec	Rec / Rec Mode	Volume-	Vol -
<< Tuning	<< / Tune-	Display	Display / Media
Tuning >>	>> / Tune+	1	1
I<< P. Call	I<< / Preset-	2	2
P. Call >>I	>>I / Preset+	3	3
Sound	Sound / Title	4	4
Tape EQ.	Subtitle / EQ	5	5
Tone	Picture / Format	6	6
Tape O.T.E.	Zoom / Size	7	7
Sleep	Sleep / Timer	8	8
Tuner/Band	TV/Radio /	9	9
PGM	Setup / OPT / Tools	+10	Guide / EPG / -/--

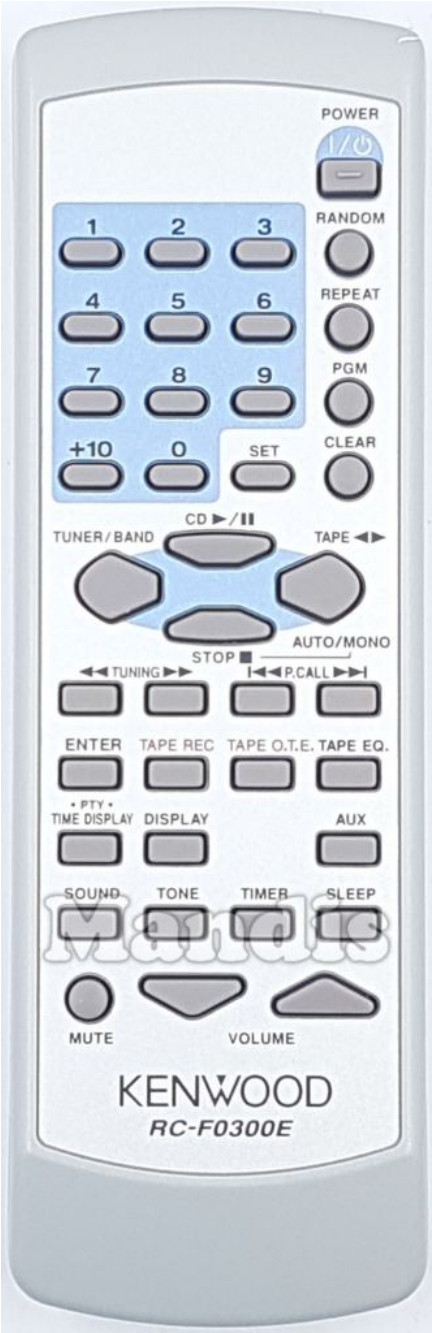

Original		Replacement		Original	Replacement
0	0	HDMI - SAT 0	0		
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat		
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random		
TIMER	Timer	SHIFT +	TIMER SLEEP Shift + Sleep / Timer		
AUX	AUX	SHIFT +	AUX - HDD 7 Shift + 7		