Mandis shop

Echostar 005

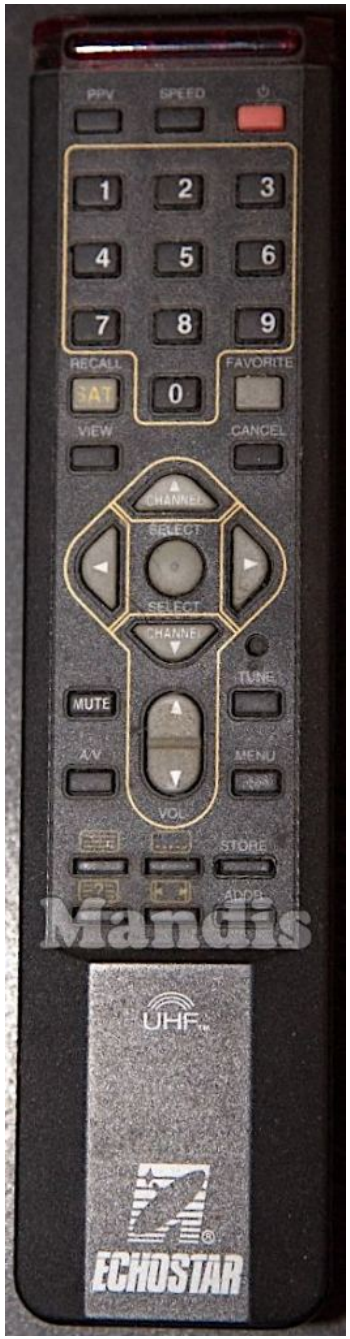

Original	Replacement	Original	Replacement
Standby	Power	Up / Channel +	Ch +
1	1	Down /	Down
2	2	Down /	Ch -
3	3	Right	Right
4	4	Left	Left
5	5	Select	Ok
6	6	Mute	Mute
7	7	Vol +	Vol +
8	8	Vol -	Vol -
9	9	Menu	Menu
0	0	A/V	AV
SAT / Recall	Smart	Tune	Media
SAT / Recall	Back	Text	Text
Favorite	Pre Ch	Subtitle	Subt
View	Info	Store	Options
Cancel	Exit	Reveal	3D
Up / Channel +	Up	Aspect	Format

https://remotecontrols.de/en/1607968/replacement-remote-control-for-Echostar-005.htm