Mandis shop

Kenwood RC-D0705

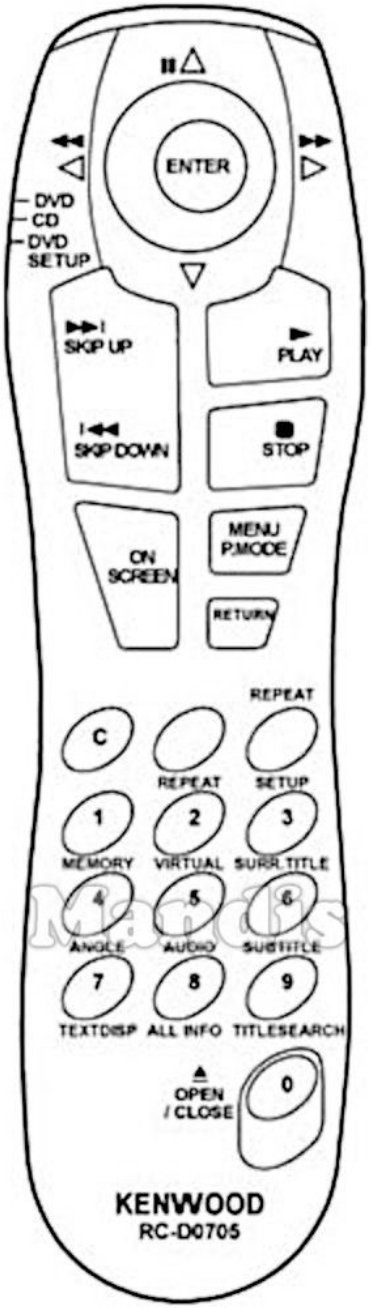

Original		Replacement	
	Up / Pause	STEP-FREEZE	Pause / Step / Freeze
	Up / Pause		Up
	Left / <<		Left
	Left / <<	TUNE-	<< / Tune-
ENTER	Enter	OK	OK
	Right / >>		Right
	Right / >>	TUNE+	>> / Tune+
	Down		Down
SKIP UP	>>I Skip Up	PRESET+	>>I / Preset+
PLAY	Play	SLOW	Play / Slow
SKIP DOWN	I<< Skip Down	PRESET-	I<< / Preset-
STOP	Stop	HOLD	Stop / Hold
ON SCREEN	On Screen	MEDIA DISPLAY	Display / Media
MENU P.MODE	Menu P.Mode	HOME MENU	Menu / Home
MENU P.MODE	Menu P.Mode	FORMAT PICTURE	Picture / Format
RETURN	Return	RETURN BACK	Back / Return
C	C	CLEAR EXIT CANCEL	Exit / Cancel / Clear

Original		Replacement	
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
REPEAT SETUP	A-B Repeat	YouTube REPEAT A-B	Yellow / YouTube / Repeat
1 MEMORY	1	TV 1	1
2 VIRTUAL	2	DVD 2	2
3 SURR.TITLE	3	CD-STB 3	3
4 ANGLE	4	VIDEO 4	4
5 AUDIO	5	TAPE 5	5
6 SUBTITLE	6	TUNER 6	6
7 TEXTDISP	7	AUX-HDD 7	7
8 ALL INFO	8	USB 8	8
9 TITLESEARCH	9	BLUETOOTH 9	9
OPEN / CLOSE 0	0 / Open/Close	HDMI-SAT 0	0
OPEN / CLOSE 0	0 / Open/Close	SURROUND	Eject / Surround

https://remotecontrols.com/Kenwood/1664-2734-replacement-remote-control-for-Kenwood-RC-D0705.htm