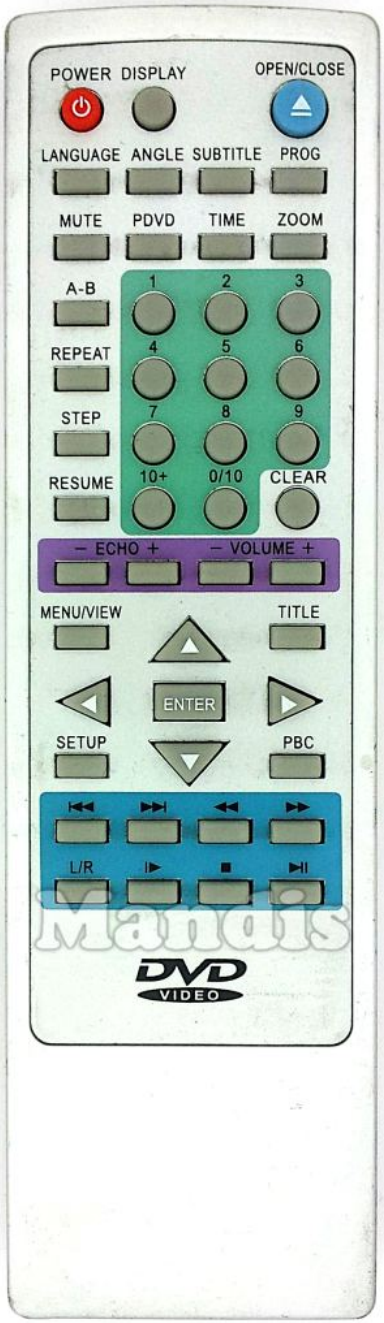

Original		Replacement	
POWER	Power		Power
DISPLAY	Display	MEDIA DISPLAY	Display / Media
OPEN/CLOSE	Open/Close	SURROUND	Eject / Surround
LANGUAGE	Language	LANG I/II AUDIO	Audio / Lang I/II
ANGLE	Angle	ANGLE INFO	Info / Angle
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
PROG	Prog	PROGRAM TV/ RADIO	TV/Radio /
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
PDVD	PDVD	RDS AV INPUT	AV / Input / RDS
TIME	Time	TIMER SLEEP	Sleep / Timer
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
4	4	VIDEO 4	4

Original		Replacement	
5	5	TAPE 5	5
6	6	TUNER 6	6
STEP	Step	SHIFT + STEP - FREEZE	Shift + Pause / Step /
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
RESUME	Resume	LIST SMART	Smart / List
10+	10+	-/-- GUIDE EPG	Guide / EPG / -/--
0/10	0/10	HDMI - SAT 0	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
ECHO -	Echo-	CH PAGE -	CH- / Page-
ECHO +	Echo+	+ CH PAGE	CH+ / Page+
VOLUME -	Volume-	VOL -	Vol-
VOLUME +	Volume+	+ VOL	Vol+
MENU/VIEW	Menu/View	HOME MENU	Menu / Home
	Up		Up
TITLE	Title	TITLE SOUND	Sound / Title

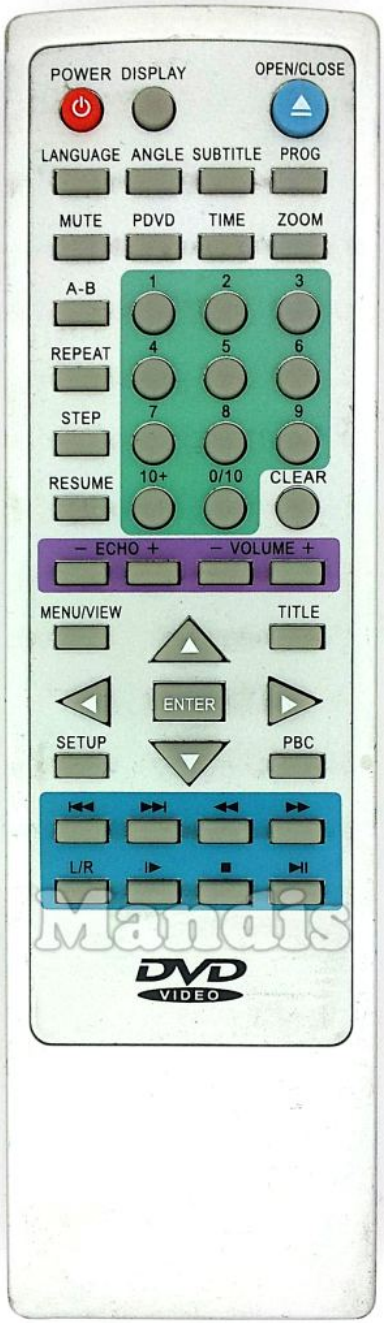

Original		Replacement		Original	Replacement
	Left		Left		
ENTER	Enter	OK	OK		
	Right		Right		
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /		
	Down		Down		
PBC	PBC	FORMAT PICTURE	Picture / Format		
	I<<	PRESET-	I<< / Preset-		
	>>I	PRESET+	>>I / Preset+		
	<<	TUNE-	<< / Tune-		
	>>	TUNE+	>> / Tune+		
L/R	L/R	GOTO TEXT	Text / Goto		
	I>	STEP-FREEZE	Pause / Step / Freeze		
	Stop	HOLD	Stop / Hold		
	Play/Pause	SLOW	Play / Slow		