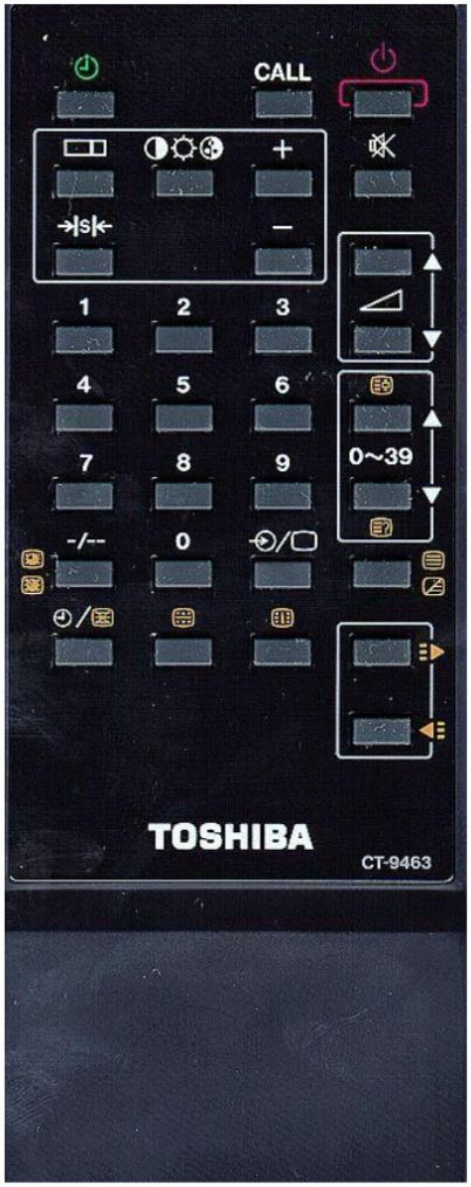

Original	Replacement	Original	Replacement
Red	Red / Netflix / Search	+	Up
Green	Green / APP / Repeat	Mute	Mute / Dimmer
Yellow	Yellow / YouTube / Repeat	⇥SI←	Picture / Format
Blue	Blue / Prime Video / Random	-	Down
Power VCR	Shift + Power	Vol +	Vol +
Pause VCR	Pause / Step / Freeze	1	1
Stop VCR	Stop / Hold	2	2
<< VCR	<< / Tune-	3	3
>> VCR	>> / Tune+	Vol -	Vol -
Play VCR	Play / Slow	4	4
I> VCR	>>I / Preset+	5	5
Prev	Back / Return	6	6
Timer	Sleep / Timer	0-39 Up	CH+ / Page+
Call	Fav / Marker / PC	7	7
Power	Power	8	8
[I]	Zoom / Size	9	9
☼	Subtitle / EQ	0-39 Down	CH- / Page-

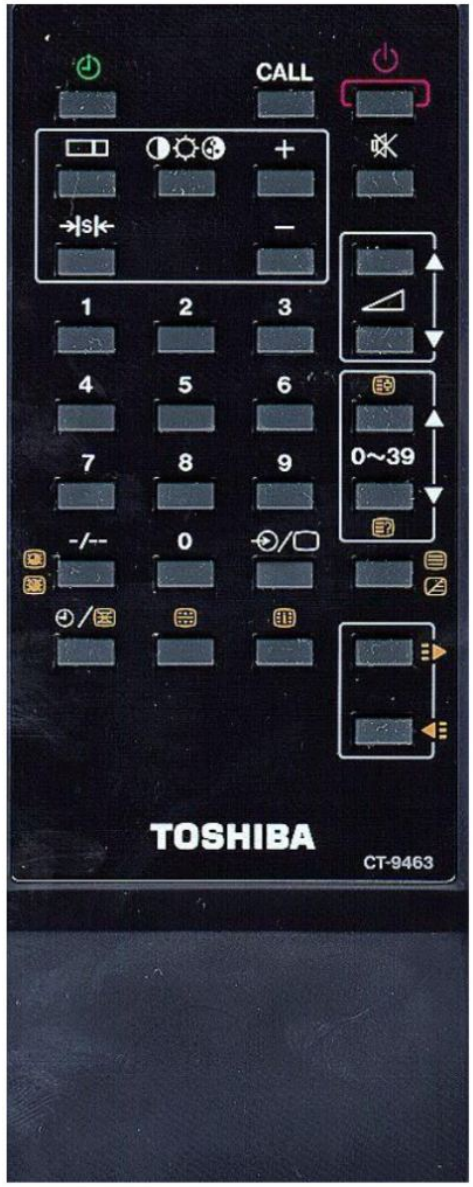

Original		Replacement		Original	Replacement
-/--	-/--	GUIDE EPG	Guide / EPG / -/--		
0	0	HDMI - SAT 0	0		
	Input	RDS AV INPUT	AV / Input / RDS		
	[=]	GOTO TEXT	Text / Goto		
	[=x]	PROGRAM TV/RADIO	TV/Radio /		
	[=♦]	LANG I/II AUDIO	Audio / Lang I/II		
	[=i]	ANGLE INFO	Info / Angle		
	[=>]		Right		
	[<=]		Left		