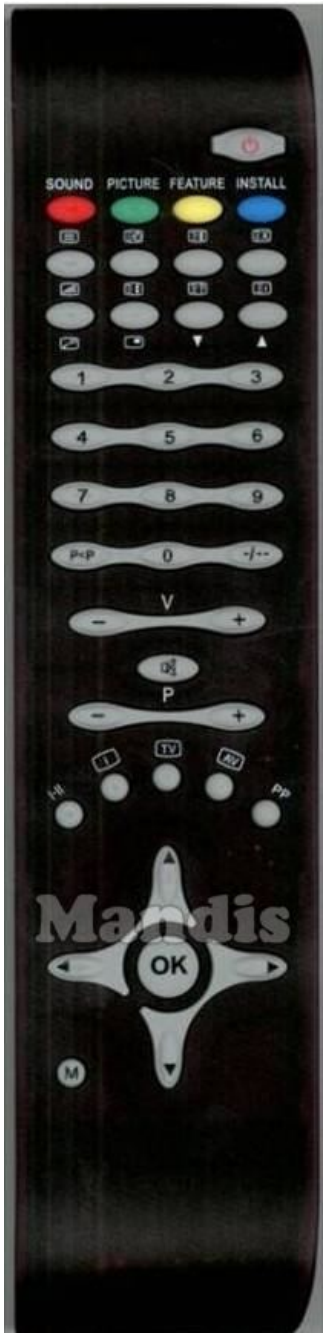

Original		Rechange	
	Power		Power
SOUND	Red/ Sound	A	Red
PICTURE	Green/ Pi cture	B	Green
FEATURE	Yel l ow/ Feat ure	C	Yel l ow
INSTALL	Bl ue/ I nst al l	D	Bl ue
	[≡]	REPEAT TEXT	Text
	[≡O]	SETTINGS OPT	Opti ons
	[≡+]	PICTURE FORMAT	For mat
	[≡X]	HOME SMART	Smart
	[. ≡] / [/ ■]	AD SUBT	Subt
	[≡♦] / [■]	APP MEDIA	Medi a
	[≡?] / ↓	ECO 3D	3D
	[≡i] / ↑	DISC NAV LIST	Li st
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4

Original		Rechange	
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
P<P	P<P	FAV PRE-CH	Pre Ch
-/--	- / - -	-/-- GUIDE	Gui de
V +	Vol +	+ VOL	Vol +
V -	Vol -	VOL −	Vol -
	Mut e	MUTE	Mut e
P +	P+	+ CH	Ch +
P -	P-	CH −	Ch -
I-II	I - I I	SOUND DUAL	Dual
[i]	[i]	DISPLAY INFO	I nf o
TV	TV	SEARCH TV/R	TV/ R
AV	AV	TIMER AV	AV

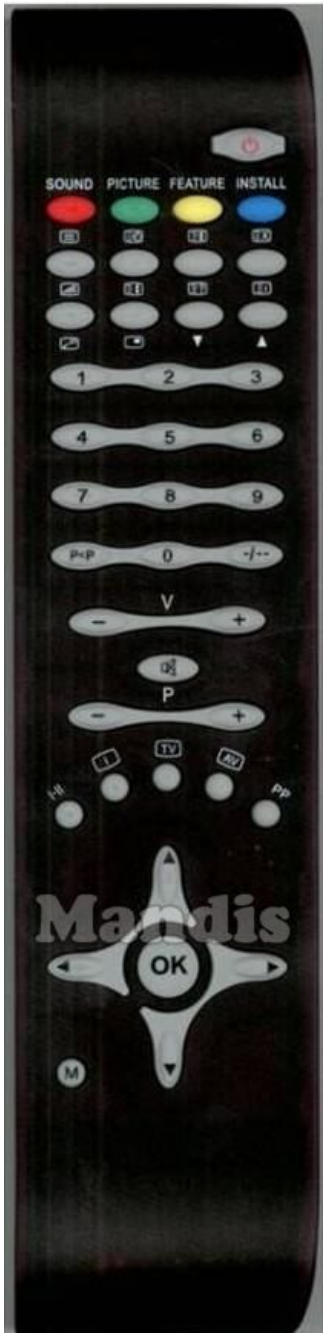

Original		Rechange	
	PP	RETURN BACK	Back
	Up		Up
	Down		Down
	Ri ght		Ri ght
	Lef t		Lef t
OK	OK	OK	Ok
M	M	TOP MENU MENU	Menu

Original	Rechange