Mandis shop

RC- 1268

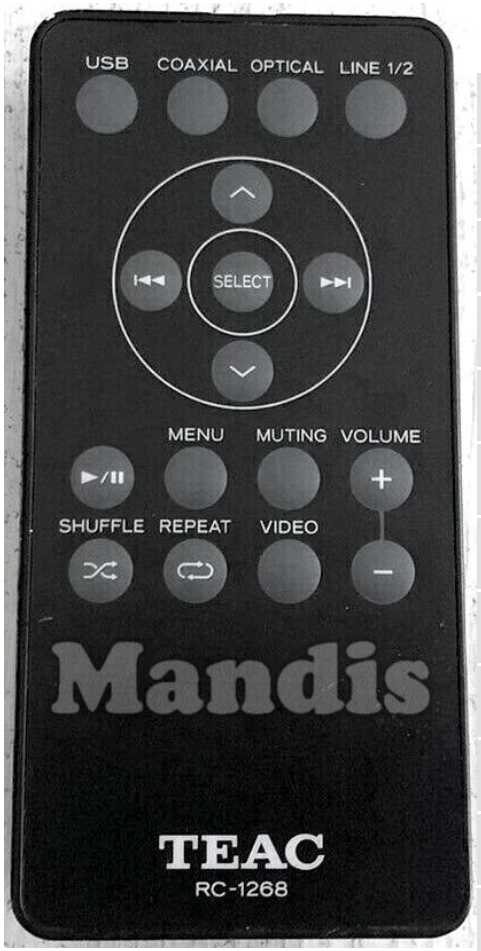

Original		Rechange	
USB	USB	1	1
COAXIAL	COAXIAL	2	2
OPTICAL	OPTICAL	3	3
LINE 1/2	LINE 1/2	4	4
∧	UP	▲	Up
⏮	Left / I <<	⏮	I <<
⏮	Left / I <<	«	<<
⏮	Left / I <<	◀	Left
SELECT	SELECT	OK	Ok
⏭	Right / >>I	⏭	>>I
⏭	Right / >>I	»	>>
⏭	Right / >>I	▶	Right
∨	DOWN	▼	Down
▶/II	PLAY/PAUSE	PLAY MODE ▶	Play
▶/II	PLAY/PAUSE	II	Pause
MENU	MENU	TOP MENU MENU	Menu
SHUFFLE	SHUFFLE	DISPLAY INFO	Info

Original		Rechange	
REPEAT	REPEAT	REPEAT TEXT	Text
VIDEO	VIDEO	APP MEDIA	Media
MUTING	MUTING	MUTE	Mute
VOLUME +	VOLUME+	+ VOL	Vol +
–	VOLUME-	VOL –	Vol -

https://remote-controls.ch/fr/10385-8476-telecommande-de-replacement-pour-RC-1268.html