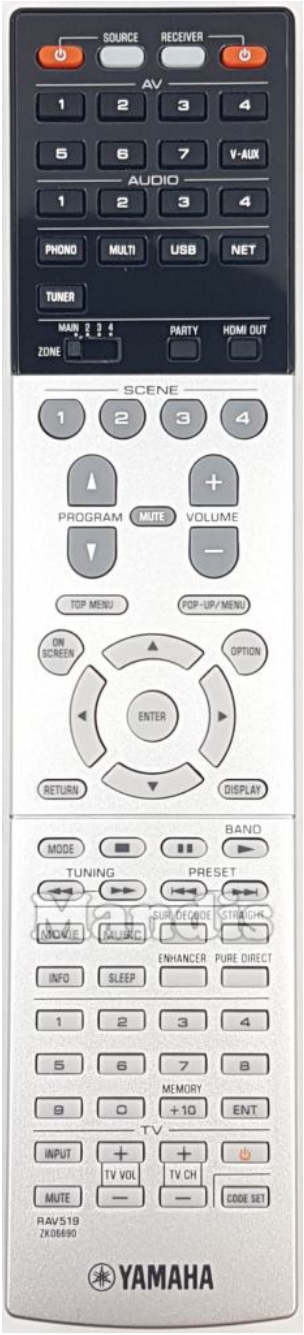


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| Power Receiver | Power | Net | Shift + Smart / List |
| Power Source | Shift + Power | Tuner | Shift + Yellow / YouTube / |
| AV1 | Shift + 1 | Party | Smart / List |
| AV2 | Shift + 2 | HDMI Out | AV / Input / RDS |
| AV3 | Shift + 3 | Scene 1 | Red / Netflix / Search |
| AV4 | Shift + 4 | Scene 2 | Green / APP / Repeat |
| AV5 | Shift + 5 | Scene 3 | Yellow / YouTube / Repeat |
| AV6 | Shift + 6 | Scene 4 | Blue / Prime Video / Random |
| AV7 | Shift + 7 | Program Up | CH+ / Page+ |
| V-AUX | Shift + 8 | Program Down | CH- / Page- |
| Audio 1 | Shift + 9 | Volume+ | Vol + |
| Audio 2 | Shift + Guide / EPG / -/-- | Volume- | Vol - |
| Audio 3 | Shift + 0 | Mute | Mute / Dimmer |
| Audio 4 | Shift + Fav / Marker / PC | Top Menu | D. Menu / Top |
| Phono | Shift + Red / Netflix / | Pop-Up Menu | Menu / Home |
| Multi | Shift + Green / APP / | On Screen | Zoom / Size |
| USB | Shift + Blue / Prime Video / Random | Option | Setup / OPT / Tools |

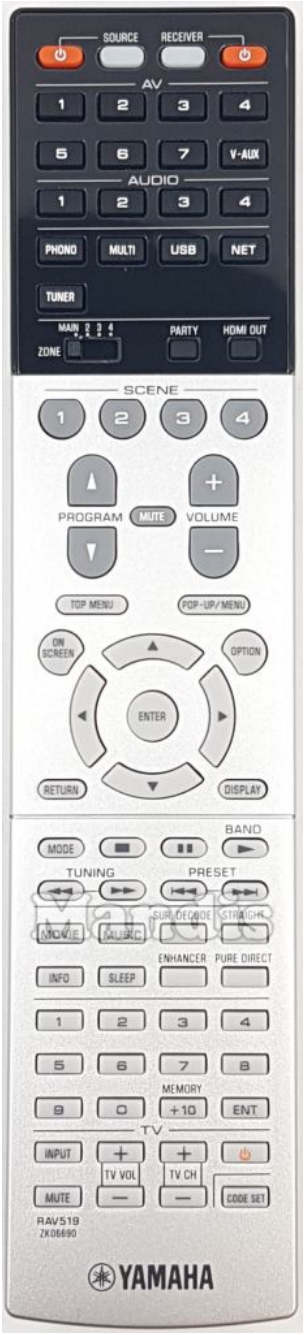


| Original | | Rechange | | Original | | Rechange | |
|---|---|---|---|---|---|---|---|
| RETURN | Return | RETURN BACK | Back / Return | SUR. DECODE | Sur Decode | SURROUND | Eject / Surround |
| DISPLAY | Display | MEDIA DISPLAY | Display / Media | STRAIGHT | Straight | TITLE SOUND | Sound / Title |
| ▲ | Up | ▲ | Up | INFO | Info | ANGLE INFO | Info / Angle |
| ▼ | Down | ▼ | Down | SLEEP | Sleep | TIMER SLEEP | Sleep / Timer |
| ▶ | Right | ▶ | Right | ENHANCER | Enhancer | GOTO TEXT | Text / Goto |
| ◀ | Left | ◀ | Left | PURE DIRECT | Pure Direct | PROGRAM TV/ RADIO | TV/ Radio / |
| ENTER | Enter | OK | OK | 1 | 1 | TV 1 | 1 |
| MODE | Mode | FORMAT PICTURE | Picture / Format | 2 | 2 | DVD 2 | 2 |
| ■ | Stop | HOLD ■ | Stop / Hold | 3 | 3 | CD - STB 3 | 3 |
| ❚❚ | Pause | STEP - FREEZE ❚❚ | Pause / Step / Freeze | 4 | 4 | VIDEO 4 | 4 |
| BAND ▶ | Play/ Band | SLOW ▶ | Play / Slow | 5 | 5 | TAPE 5 | 5 |
| ◀◀ | << Tuning | TUNE- ◀◀ | << / Tune- | 6 | 6 | TUNER 6 | 6 |
| ▶▶ | Tuning >> | TUNE+ ▶▶ | >> / Tune+ | 7 | 7 | AUX - HDD 7 | 7 |
| ⏮ | I << Preset | PRESET- ⏮ | I << / Preset- | 8 | 8 | USB 8 | 8 |
| ⏭ | Preset >>I | PRESET+ ⏭ | >>I / Preset+ | 9 | 9 | BLUETOOTH 9 | 9 |
| MOVIE | Movie | EQ SUBTITLE | Subtitle / EQ | 0 | 0 | HDMI - SAT 0 | 0 |
| MUSIC | Music | LANG I/II AUDIO | Audio / Lang I/II | MEMORY +10 | +10/ Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |

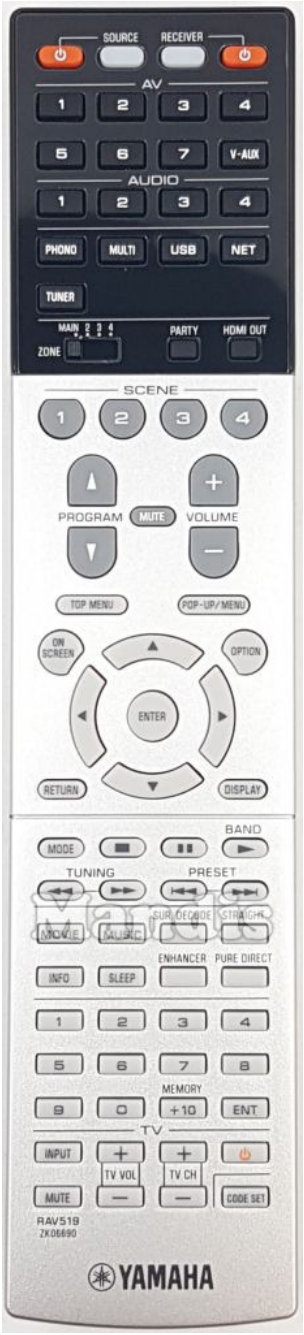


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| ENT. | Fav / Marker / PC | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

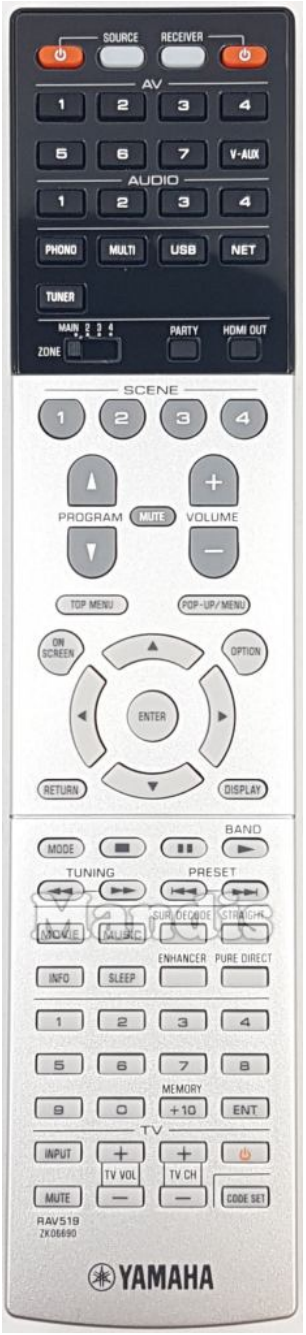


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| Power Receiver | Power | Tuner | Shift + Yellow / YouTube / |
| Power Source | Shift + Power | Party | Smart / List |
| AV1 | Shift + 1 | HDMI Out | AV / Input / RDS |
| AV2 | Shift + 2 | Scene 1 | Red / Netflix / Search |
| AV3 | Shift + 3 | Scene 2 | Green / APP / Repeat |
| AV4 | Shift + 4 | Scene 3 | Yellow / YouTube / Repeat |
| AV5 | Shift + 5 | Scene 4 | Blue / Prime Video / Random |
| AV6 | Shift + 6 | Mute | Mute / Dimmer |
| AV7 | Shift + 7 | Volume+ | Vol + |
| V-AUX | Shift + 8 | Volume- | Vol - |
| Audio 1 | Shift + 9 | Pop-Up Menu | Menu / Home |
| Audio 2 | Shift + Guide / EPG / -/-- | Top Menu | D. Menu / Top |
| Audio 3 | Shift + 0 | Option | Setup / OPT / |
| Audio 4 | Shift + Fav / Marker / PC | Display | Display / Media |
| Phono | Shift + Red / Netflix / | Return | Back / Return |
| Net | Shift + Smart / List | On Screen | Zoom / Size |
| USB | Shift + Blue / Prime Video / Random | Up | Up |

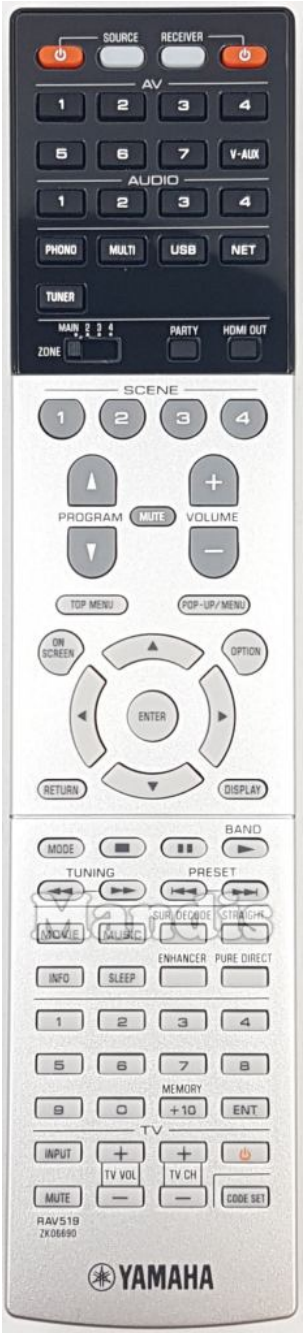


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| Down | Down | 4 | 4 |
| Right | Right | 5 | 5 |
| Left | Left | 6 | 6 |
| Enter | OK | 7 | 7 |
| Mode | Picture / Format | 8 | 8 |
| Stop | Stop / Hold | 9 | 9 |
| Pause | Pause / Step / Freeze | 0 | 0 |
| Play/ Band | Play / Slow | +10/ Memory | Guide / EPG / -/-- |
| << Tuning | << / Tune- | ENT | Fav / Marker / PC |
| Tuning >> | >> / Tune+ | | |
| I << Preset | I << / Preset- | | |
| Preset >>I | >>I / Preset+ | | |
| Info | Info / Angle | | |
| Sleep | Sleep / Timer | | |
| 1 | 1 | | |
| 2 | 2 | | |
| 3 | 3 | | |

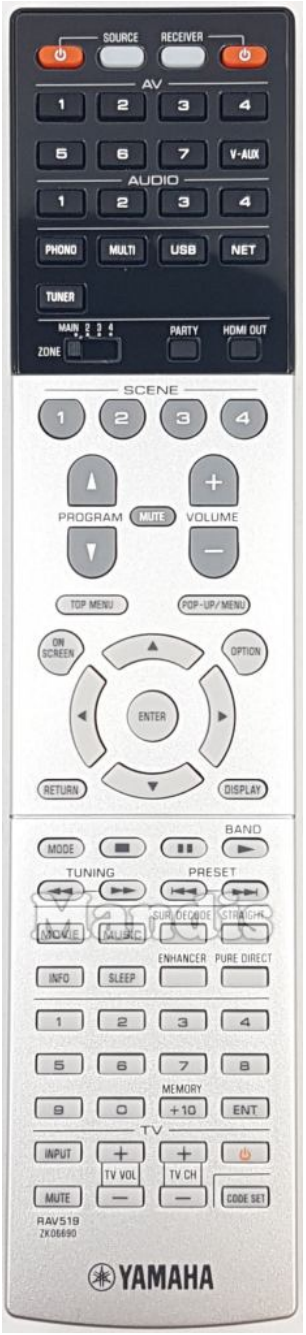


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| Power Receiver | Power | Tuner | Shift + Yellow / YouTube / |
| Power Source | Shift + Power | Party | Smart / List |
| AV1 | Shift + 1 | HDMI Out | AV / Input / RDS |
| AV2 | Shift + 2 | Scene 1 | Red / Netflix / Search |
| AV3 | Shift + 3 | Scene 2 | Green / APP / Repeat |
| AV4 | Shift + 4 | Scene 3 | Yellow / YouTube / Repeat |
| AV5 | Shift + 5 | Scene 4 | Blue / Prime Video / Random |
| AV6 | Shift + 6 | Volume+ | Vol + |
| AV7 | Shift + 7 | Volume - | Vol - |
| V-AUX | Shift + 8 | Mute | Mute / Dimmer |
| Audio 1 | Shift + 9 | Pop-Up Menu | Menu / Home |
| Audio 2 | Shift + Guide / EPG / -/-- | Top Menu | D. Menu / Top |
| Audio 3 | Shift + 0 | Info | Info / Angle |
| Audio 4 | Shift + Fav / Marker / PC | Option | Setup / OPT / |
| Phono | Shift + Red / Netflix / | Return | Back / Return |
| USB | Shift + Blue / Prime | On Screen | Zoom / Size |
| Net | Shift + Smart / List | Enter | OK |

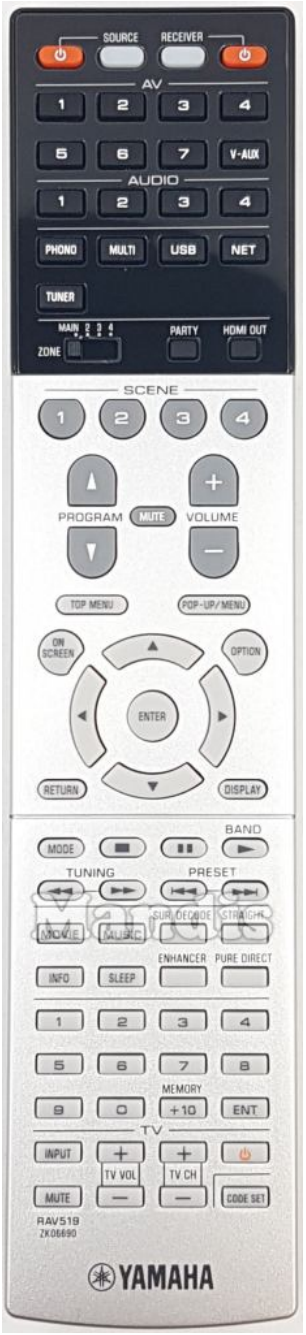


| Original | | Rechange | | Original | | Rechange | |
|---|---|---|---|---|---|---|---|
| DISPLAY | Display | MEDIA DISPLAY | Display / Media | 4 | 4 | VIDEO 4 | 4 |
| ▲ | Up | ▲ | Up | 5 | 5 | TAPE 5 | 5 |
| ▼ | Down | ▼ | Down | 6 | 6 | TUNER 6 | 6 |
| ▶ | Right | ▶ | Right | 7 | 7 | AUX-HDD 7 | 7 |
| ◀ | Left | ◀ | Left | 8 | 8 | USB 8 | 8 |
| MODE | Mode | FORMAT PICTURE | Picture / Format | 9 | 9 | BLUETOOTH 9 | 9 |
| ■ | Stop | HOLD ■ | Stop / Hold | 0 | 0 | HDMI-SAT 0 | 0 |
| ❚❚ | Pause | STEP-FREEZE ❚❚ | Pause / Step / Freeze | MEMORY +10 | +10/ Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |
| BAND ▶ | Play/ Band | SLOW ▶ | Play / Slow | ENT | ENT | PC FAV MARKER | Fav / Marker / PC |
| ◀◀ | << Tuning | TUNE- ◀◀ | << / Tune- | | | | |
| ▶▶ | Tuning >> | TUNE+ ▶▶ | >> / Tune+ | | | | |
| ❙◀◀ | I << Preset | PRESET- ❙◀◀ | I << / Preset- | | | | |
| ▶▶❙ | Preset >>I | PRESET+ ▶▶❙ | >>I / Preset+ | | | | |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer | | | | |
| 1 | 1 | TV 1 | 1 | | | | |
| 2 | 2 | DVD 2 | 2 | | | | |
| 3 | 3 | CD-STB 3 | 3 | | | | |

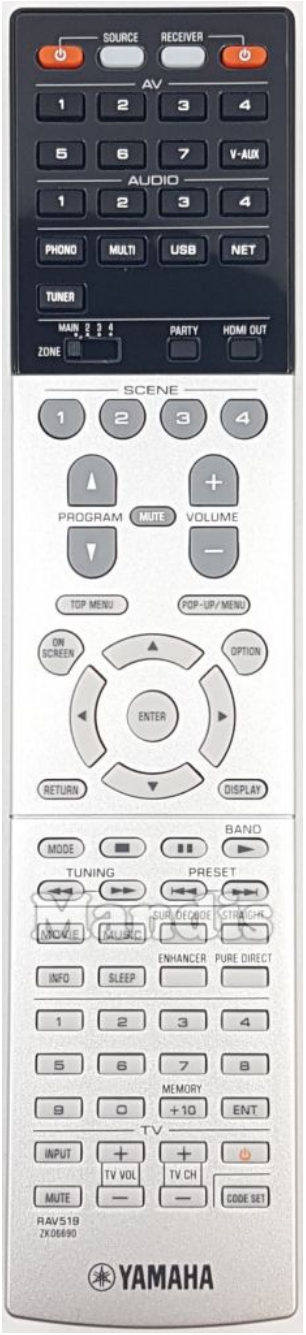


| Original | Rechange | Original | Rechange |
|---|---|---|---|
| Power Receiver | Power | Tuner | Shift + Yellow / YouTube / |
| Power Source | Shift + Power | Party | Smart / List |
| AV1 | Shift + 1 | HDMI Out | AV / Input / RDS |
| AV2 | Shift + 2 | Scene 1 | Red / Netflix / Search |
| AV3 | Shift + 3 | Scene 2 | Green / APP / Repeat |
| AV4 | Shift + 4 | Scene 3 | Yellow / YouTube / Repeat |
| AV5 | Shift + 5 | Scene 4 | Blue / Prime Video / Random |
| AV6 | Shift + 6 | Volume+ | Vol + |
| AV7 | Shift + 7 | Volume- | Vol - |
| V-AUX | Shift + 8 | Mute | Mute / Dimmer |
| Audio 1 | Shift + 9 | Top Menu | D. Menu / Top |
| Audio 2 | Shift + Guide / EPG / -/-- | Pop-Up Menu | Menu / Home |
| Audio 3 | Shift + 0 | On Screen | Zoom / Size |
| Audio 4 | Shift + Fav / Marker / PC | Option | Setup / OPT / |
| Phono | Shift + Red / Netflix / | Return | Back / Return |
| USB | Shift + Blue / Prime | Display | Display / Media |
| Net | Shift + Smart / List | Up | Up |

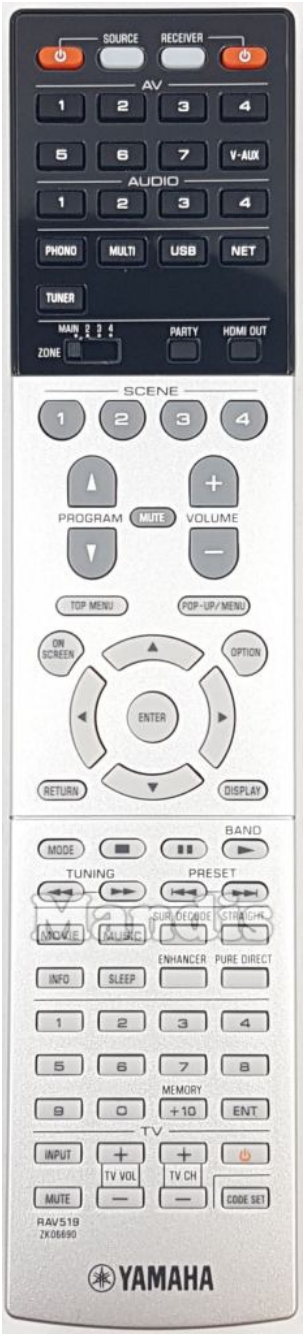


| Original | | Rechange | |
|---|---|---|---|
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| ENTER | Enter | OK | OK |
| MODE | Mode | FORMAT PICTURE | Picture / Format |
| | Stop | HOLD | Stop / Hold |
| | Pause | STEP-FREEZE | Pause / Step / Freeze |
| BAND | Play/Band | SLOW | Play / Slow |
| | << Tuning | TUNE- | << / Tune- |
| | Tuning >> | TUNE+ | >> / Tune+ |
| | I<< Preset | PRESET- | I<< / Preset- |
| | Preset >>I | PRESET+ | >>I / Preset+ |
| INFO | Info | ANGLE INFO | Info / Angle |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer |
| 1 | 1 | TV 1 | 1 |
| 2 | 2 | DVD 2 | 2 |
| 3 | 3 | CD-STB 3 | 3 |

| Original | | Rechange | |
|---|---|---|---|
| 4 | 4 | VIDEO 4 | 4 |
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX-HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI-SAT 0 | 0 |
| MEMORY +10 | +10/Memory | -/-- GUIDE EPG | Guide / EPG / -/-- |
| ENT | ENT | PC FAV MARKER | Fav / Marker / PC |