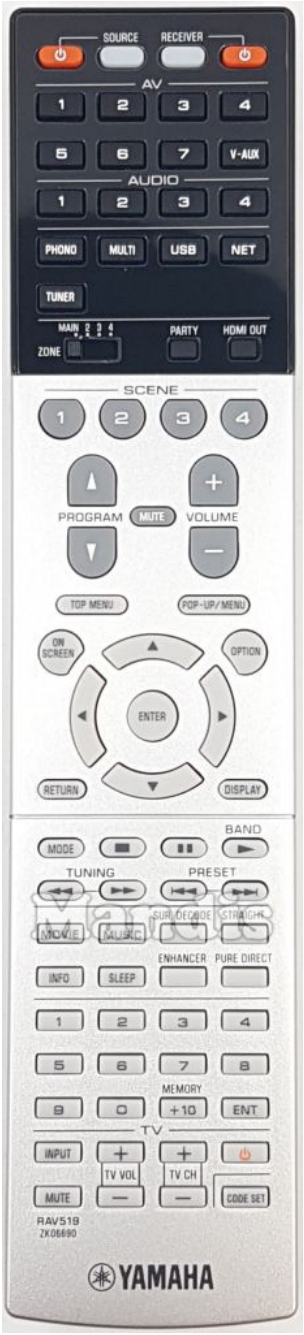

Original	Rechange	Original	Rechange
Power Receiver	Power	Net	Shift + Smart / List
Power Source	Shift + Power	Tuner	Shift + Yellow / YouTube /
AV1	Shift + 1	Party	Smart / List
AV2	Shift + 2	HDMI Out	AV / Input / RDS
AV3	Shift + 3	Scene 1	Red / Netflix / Search
AV4	Shift + 4	Scene 2	Green / APP / Repeat
AV5	Shift + 5	Scene 3	Yellow / YouTube / Repeat
AV6	Shift + 6	Scene 4	Blue / Prime Video / Random
AV7	Shift + 7	Program Up	CH+ / Page+
V-AUX	Shift + 8	Program Down	CH- / Page-
Audio 1	Shift + 9	Volume+	Vol +
Audio 2	Shift + Guide / EPG / -/--	Volume-	Vol -
Audio 3	Shift + 0	Mute	Mute / Dimmer
Audio 4	Shift + Fav / Marker / PC	Top Menu	D. Menu / Top
Phono	Shift + Red / Netflix /	Pop-Up Menu	Menu / Home
Multi	Shift + Green / APP /	On Screen	Zoom / Size
USB	Shift + Blue / Prime Video / Random	Option	Setup / OPT / Tools

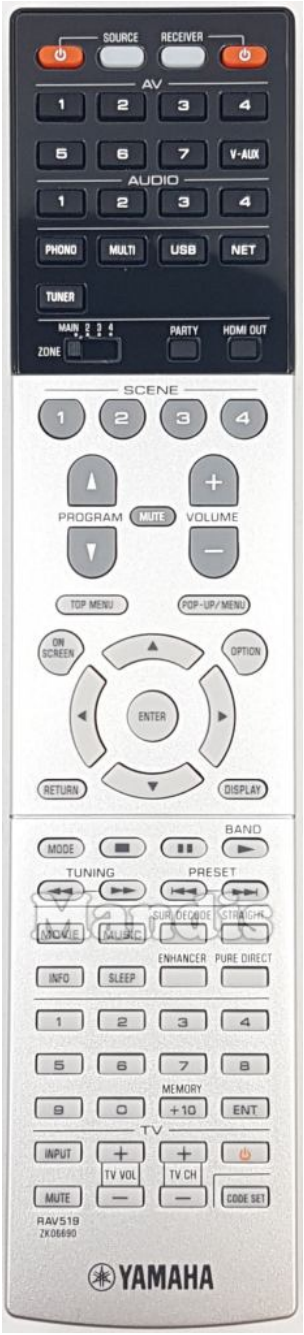

Original		Rechange		Original		Rechange	
RETURN	Return	RETURN BACK	Back / Return	SUR. DECODE	Sur Decode	SURROUND	Eject / Surround
DISPLAY	Display	MEDIA DISPLAY	Display / Media	STRAIGHT	Straight	TITLE SOUND	Sound / Title
▲	Up	▲	Up	INFO	Info	ANGLE INFO	Info / Angle
▼	Down	▼	Down	SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
▶	Right	▶	Right	ENHANCER	Enhancer	GOTO TEXT	Text / Goto
◀	Left	◀	Left	PURE DIRECT	Pure Direct	PROGRAM TV/ RADIO	TV/ Radio /
ENTER	Enter	OK	OK	1	1	TV 1	1
MODE	Mode	FORMAT PICTURE	Picture / Format	2	2	DVD 2	2
■	Stop	HOLD ■	Stop / Hold	3	3	CD - STB 3	3
❚❚	Pause	STEP - FREEZE ❚❚	Pause / Step / Freeze	4	4	VIDEO 4	4
BAND ▶	Play/ Band	SLOW ▶	Play / Slow	5	5	TAPE 5	5
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-	6	6	TUNER 6	6
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+	7	7	AUX - HDD 7	7
⏮	I << Preset	PRESET- ⏮	I << / Preset-	8	8	USB 8	8
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+	9	9	BLUETOOTH 9	9
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ	0	0	HDMI - SAT 0	0
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II	MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--

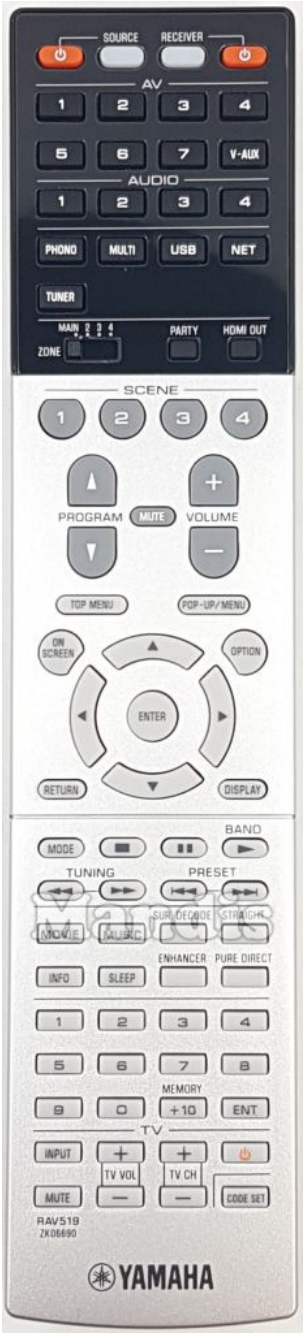

Original	Rechange	Original	Rechange
ENT.	Fav / Marker / PC		

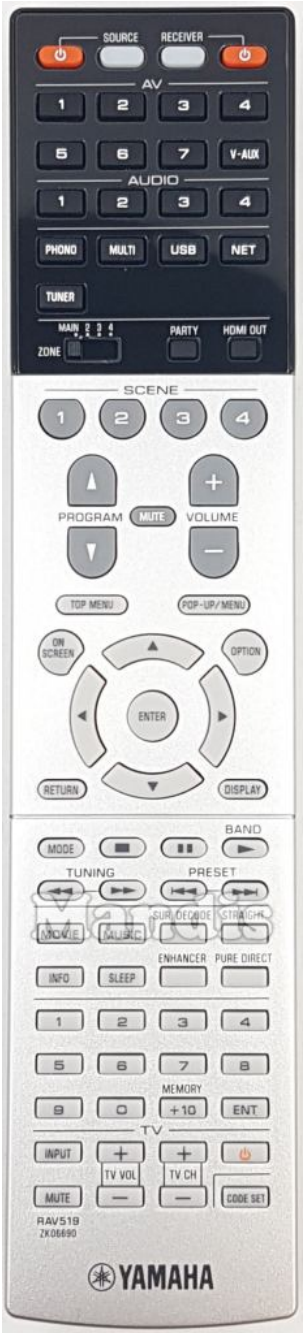

Original	Rechange	Original	Rechange
Power Receiver	Power	Tuner	Shift + Yellow / YouTube /
Power Source	Shift + Power	Party	Smart / List
AV1	Shift + 1	HDMI Out	AV / Input / RDS
AV2	Shift + 2	Scene 1	Red / Netflix / Search
AV3	Shift + 3	Scene 2	Green / APP / Repeat
AV4	Shift + 4	Scene 3	Yellow / YouTube / Repeat
AV5	Shift + 5	Scene 4	Blue / Prime Video / Random
AV6	Shift + 6	Mute	Mute / Dimmer
AV7	Shift + 7	Volume+	Vol +
V-AUX	Shift + 8	Volume-	Vol -
Audio 1	Shift + 9	Pop-Up Menu	Menu / Home
Audio 2	Shift + Guide / EPG / -/--	Top Menu	D. Menu / Top
Audio 3	Shift + 0	Option	Setup / OPT /
Audio 4	Shift + Fav / Marker / PC	Display	Display / Media
Phono	Shift + Red / Netflix /	Return	Back / Return
Net	Shift + Smart / List	On Screen	Zoom / Size
USB	Shift + Blue / Prime Video / Random	Up	Up

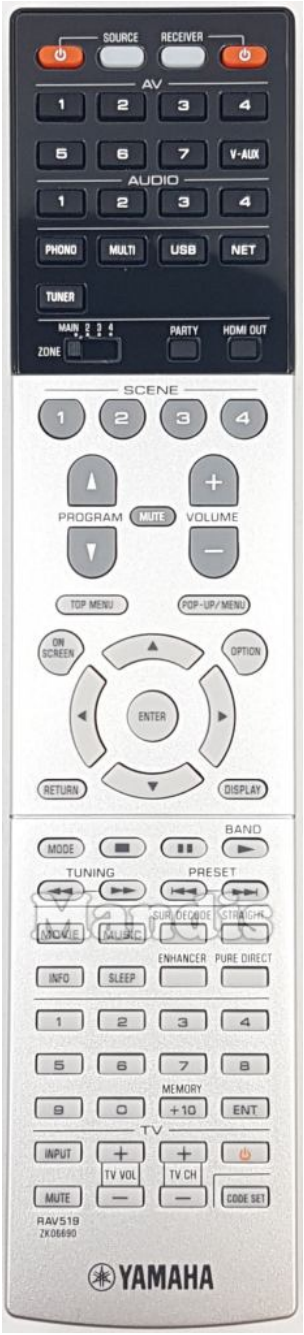

Original	Rechange	Original	Rechange
Down	Down	4	4
Right	Right	5	5
Left	Left	6	6
Enter	OK	7	7
Mode	Picture / Format	8	8
Stop	Stop / Hold	9	9
Pause	Pause / Step / Freeze	0	0
Play/ Band	Play / Slow	+10/ Memory	Guide / EPG / -/--
<< Tuning	<< / Tune-	ENT	Fav / Marker / PC
Tuning >>	>> / Tune+		
I << Preset	I << / Preset-		
Preset >>I	>>I / Preset+		
Info	Info / Angle		
Sleep	Sleep / Timer		
1	1		
2	2		
3	3		

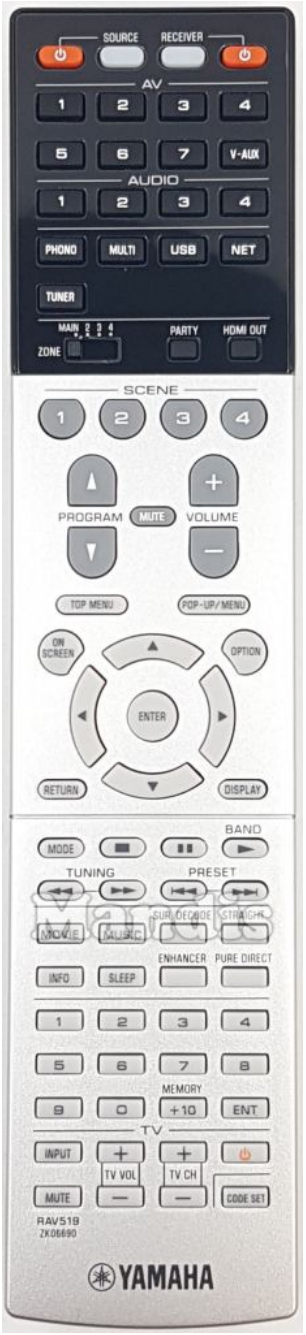

Original	Rechange	Original	Rechange
Power Receiver	Power	Tuner	Shift + Yellow / YouTube /
Power Source	Shift + Power	Party	Smart / List
AV1	Shift + 1	HDMI Out	AV / Input / RDS
AV2	Shift + 2	Scene 1	Red / Netflix / Search
AV3	Shift + 3	Scene 2	Green / APP / Repeat
AV4	Shift + 4	Scene 3	Yellow / YouTube / Repeat
AV5	Shift + 5	Scene 4	Blue / Prime Video / Random
AV6	Shift + 6	Volume+	Vol +
AV7	Shift + 7	Volume -	Vol -
V-AUX	Shift + 8	Mute	Mute / Dimmer
Audio 1	Shift + 9	Pop-Up Menu	Menu / Home
Audio 2	Shift + Guide / EPG / -/--	Top Menu	D. Menu / Top
Audio 3	Shift + 0	Info	Info / Angle
Audio 4	Shift + Fav / Marker / PC	Option	Setup / OPT /
Phono	Shift + Red / Netflix /	Return	Back / Return
USB	Shift + Blue / Prime	On Screen	Zoom / Size
Net	Shift + Smart / List	Enter	OK

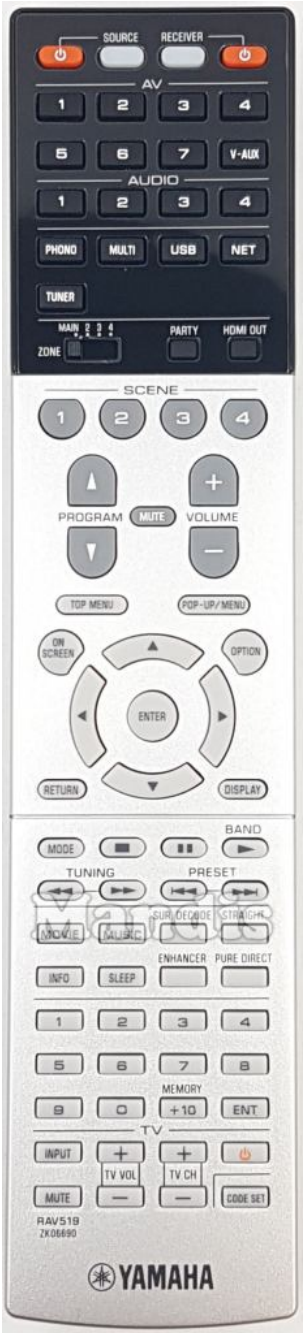

Original		Rechange		Original		Rechange	
DISPLAY	Display	MEDIA DISPLAY	Display / Media	4	4	VIDEO 4	4
▲	Up	▲	Up	5	5	TAPE 5	5
▼	Down	▼	Down	6	6	TUNER 6	6
▶	Right	▶	Right	7	7	AUX-HDD 7	7
◀	Left	◀	Left	8	8	USB 8	8
MODE	Mode	FORMAT PICTURE	Picture / Format	9	9	BLUETOOTH 9	9
■	Stop	HOLD ■	Stop / Hold	0	0	HDMI-SAT 0	0
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze	MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--
BAND ▶	Play/ Band	SLOW ▶	Play / Slow	ENT	ENT	PC FAV MARKER	Fav / Marker / PC
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-				
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+				
⏮	I << Preset	PRESET- ⏮	I << / Preset-				
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD-STB 3	3				

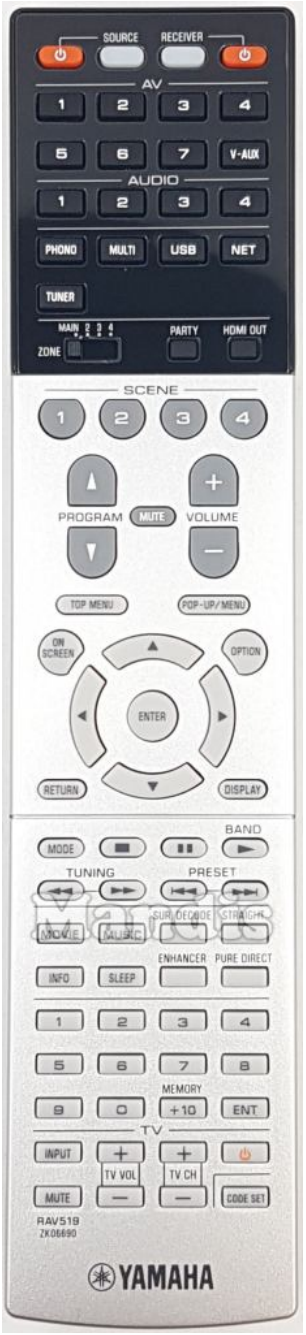

Original	Rechange	Original	Rechange
Power Receiver	Power	Tuner	Shift + Yellow / YouTube /
Power Source	Shift + Power	Party	Smart / List
AV1	Shift + 1	HDMI Out	AV / Input / RDS
AV2	Shift + 2	Scene 1	Red / Netflix / Search
AV3	Shift + 3	Scene 2	Green / APP / Repeat
AV4	Shift + 4	Scene 3	Yellow / YouTube / Repeat
AV5	Shift + 5	Scene 4	Blue / Prime Video / Random
AV6	Shift + 6	Volume+	Vol +
AV7	Shift + 7	Volume-	Vol -
V-AUX	Shift + 8	Mute	Mute / Dimmer
Audio 1	Shift + 9	Top Menu	D. Menu / Top
Audio 2	Shift + Guide / EPG / -/--	Pop-Up Menu	Menu / Home
Audio 3	Shift + 0	On Screen	Zoom / Size
Audio 4	Shift + Fav / Marker / PC	Option	Setup / OPT /
Phono	Shift + Red / Netflix /	Return	Back / Return
USB	Shift + Blue / Prime	Display	Display / Media
Net	Shift + Smart / List	Up	Up

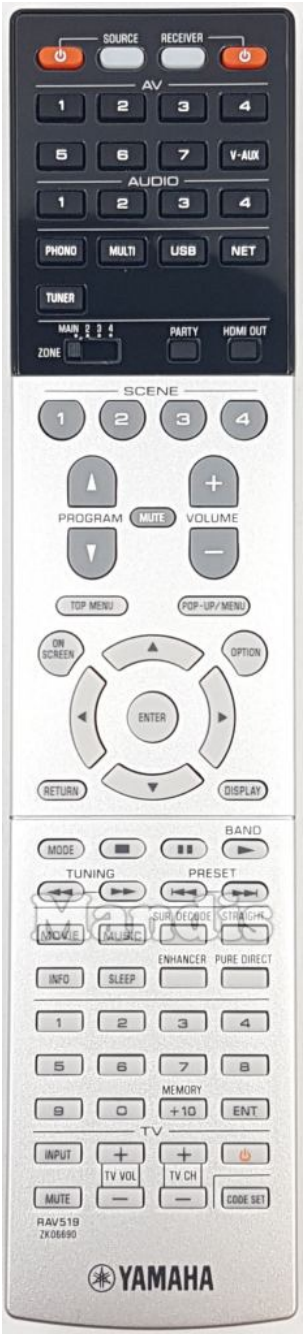

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC