Mandis shop

Pioneer CU-PD023

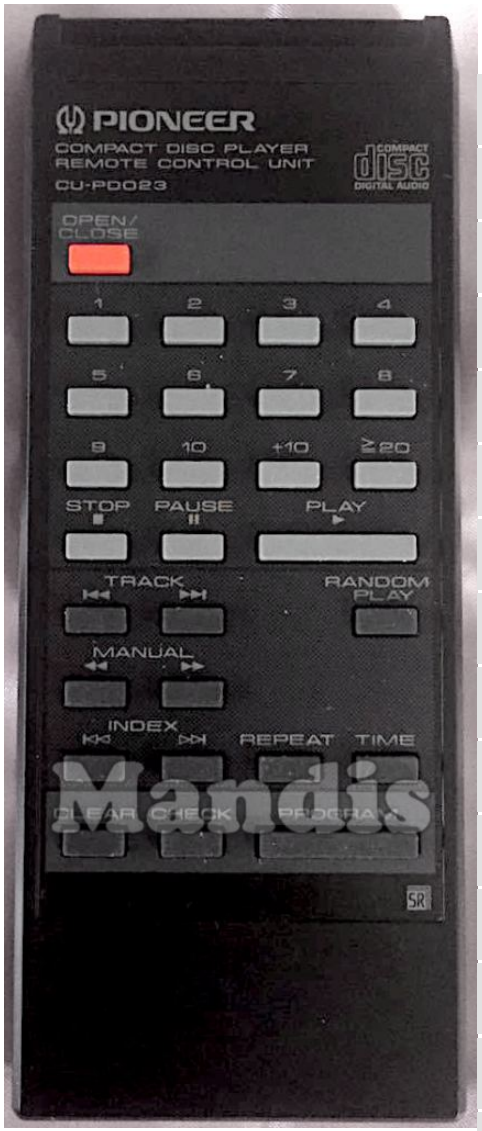

Original	Rechange	Original	Rechange
Open/Close	Eject / Surround	Track >>I	>>I / Preset+
1	1	Random Play	Blue / Prime Video / Random
2	2	<< Manual	<< / Tune-
3	3	Manual >>	>> / Tune+
4	4	I << Index	Left
5	5	Index >>I	Right
6	6	Repeat	Green / APP / Repeat
7	7	Time	Sleep / Timer
8	8	Clear	Exit / Cancel / Clear
9	9	Check	Smart / List
10	0	Program	TV/Radio /
+10	Guide / EPG / -/--		
≧20	Fav / Marker / PC		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		
Play	Play / Slow		
I << Track	I << / Preset-		

https://remotecontrols.fr/Pioneer/1056-367-telecommande-remplacement-pour-Pioneer-CU-PD023-PW028.htm