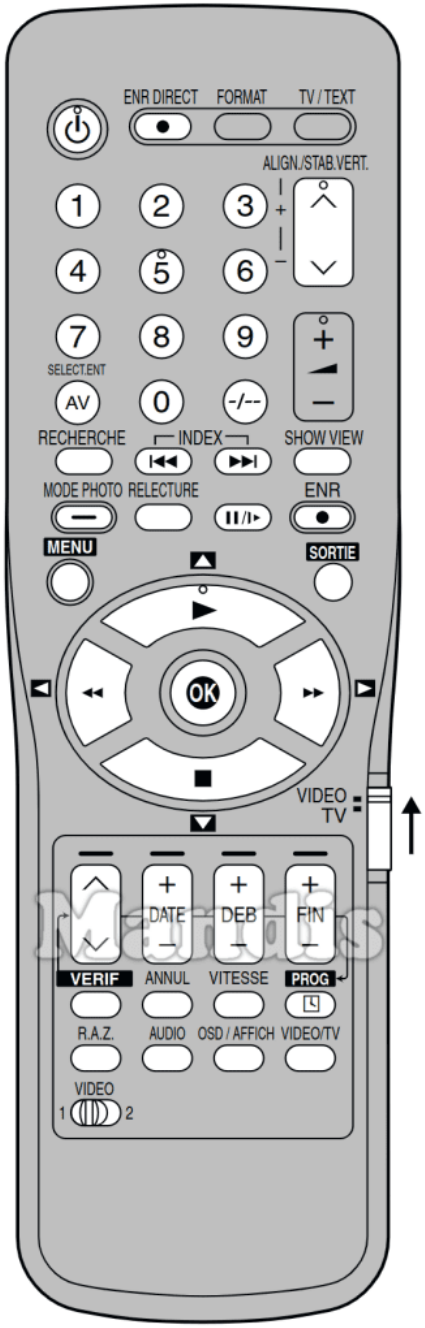

Original		Rechange	
	Power		Power
ENR DIRECT	Enr Direct	SHIFT + REC MODE	Shift + Rec / Rec Mode
FORMAT	Format	FORMAT PICTURE	Picture / Format
TV / TEXT	Tv/Text	GOTO TEXT	Text / Goto
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
ALIGN./STAB.VERT. +	Align / Stab. Vert. +	+ CH PAGE	CH+ / Page+
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
	Align / Stab. Ver	CH PAGE −	CH- / Page-
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
+	Vol +	+ VOL	Vol +
SELECT.ENT AV	AV / Select En	RDS AV INPUT	AV / Input / RDS

Original		Rechange	
0	0	HDMI - SAT 0	0
-/--	-/--	-/-- GUIDE EPG	Guide / EPG / -/--
−	Vol -	VOL −	Vol -
RECHERCHE	Recherche	NETFLIX SEARCH	Red / Netflix / Search
INDEX	I << Index	PRESET-	I << / Preset-
INDEX	Index >>I	PRESET+	>>I / Preset+
SHOW VIEW	ShowView	ANGLE INFO	Info / Angle
MODE PHOTO	Mode Photo	LIST SMART	Smart / List
RELECTURE	Relecture	RETURN BACK	Back / Return
	Pause/Step	STEP - FREEZE	Pause / Step / Freeze
ENR	Enr	REC MODE	Rec / Rec Mode
MENU	Menu	HOME MENU	Menu / Home
	Up		Up
	Play	SLOW	Play / Slow
SORTIE	Sortie	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Left		Left
	<<	TUNE-	<< / Tune-

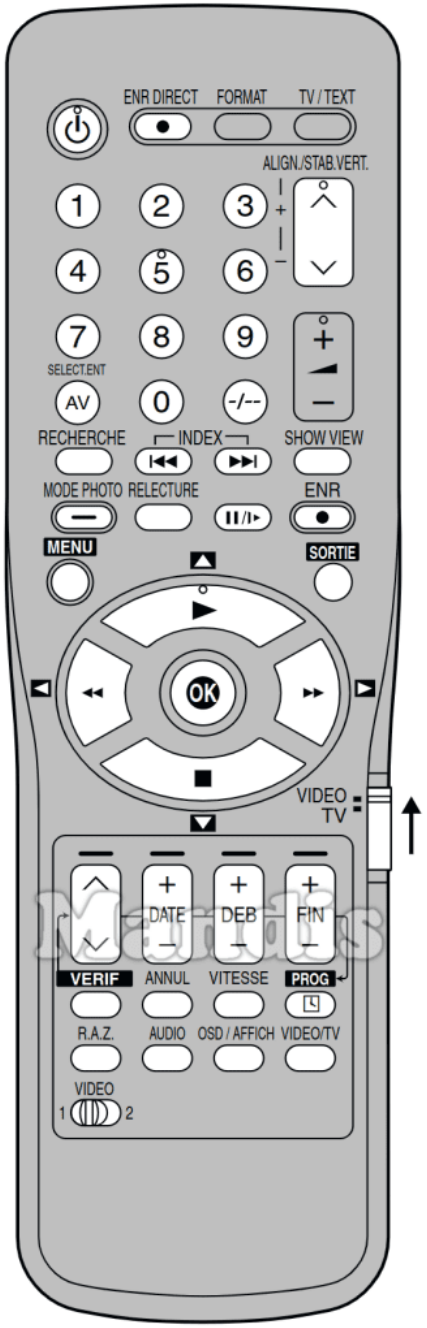

Original		Rechange	
OK	OK	OK	OK
Right	Right	Right	Right
>>	>> / Tune+	TUNE+	>> / Tune+
Down	Down	Down	Down
Stop	Stop / Hold	HOLD	Stop / Hold
Verif Up	Shift + Up	SHIFT +	Shift + Up
Date+	Shift + Right	SHIFT +	Shift + Right
Deb+	Shift + Vol +	SHIFT + VOL	Shift + Vol +
Fin+	Shift + CH+ /	SHIFT + CH PAGE	Shift + CH+ /
Verif Down	Shift + Down	SHIFT +	Shift + Down
Date-	Shift + Left	SHIFT +	Shift + Left
Deb-	Shift + Vol -	SHIFT + VOL	Shift + Vol -
Fin-	Shift + CH- /	SHIFT + CH PAGE	Shift + CH- /
Verif	TV/ Radio /	PROGRAM TV/ RADIO	TV/ Radio /
Annul	Shift + Exit / Cancel / Clear	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear
SP/ LP/ EP	Setup / OPT /	OPT-TOOLS SETUP	Setup / OPT /
Prog	Sleep / Timer	TIMER SLEEP	Sleep / Timer

Original		Rechange	
R.A.Z.	I-Timer	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
OSD / AFFICH	OSD/ Affich	MEDIA DISPLAY	Display / Media
VIDEO/TV	Reset	APP REPEAT	Green / APP / Repeat

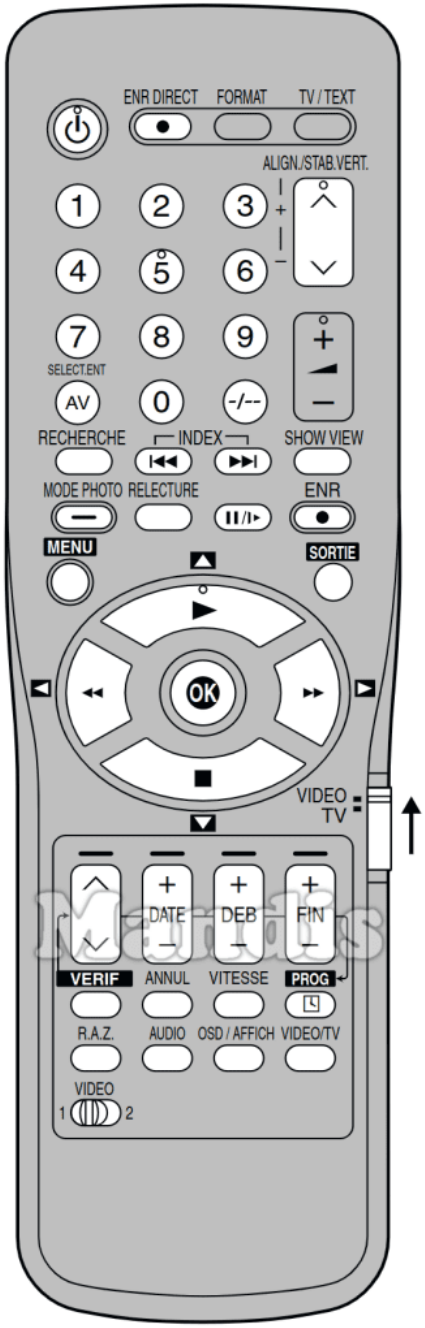

Original		Rechange	
	Power		Power
ENR DIRECT	Enr Direct	PROGRAM TV/ RADIO	TV/ Radio /
FORMAT	Format	SIZE ZOOM	Zoom / Size
TV / TEXT	Tv/ Text	GOTO TEXT	Text / Goto
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
ALIGN./STAB.VERT.	Align/ Stab. Vert	+ CH PAGE	CH+ / Page+
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
	Align/ Stab. Vert	CH PAGE −	CH- / Page-
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
	Volume+	+ VOL	Vol +
SELECT.ENT AV	AV/ Select Ent	RDS AV INPUT	AV / Input / RDS

Original		Rechange	
0	0	HDMI - SAT 0	0
-/--	-/--	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
	Volume-	VOL −	Vol -
RECHERCHE	Recherche	NETFLIX SEARCH	Red / Netflix / Search
INDEX	Index <<	PRESET-	Index << / Preset-
INDEX	Index >>I	PRESET+	>>I / Preset+
SHOW VIEW	Show View	FORMAT PICTURE	Picture / Format
MODE PHOTO	Mode Photo	OPT-TOOLS SETUP	Setup / OPT /
RELECTURE	Relecture	MEDIA DISPLAY	Display / Media
	Pause/ Step	STEP - FREEZE	Pause / Step / Freeze
ENR	Enr	REC MODE	Rec / Rec Mode
MENU	Menu	HOME MENU	Menu / Home
	Play	SLOW	Play / Slow
	Up		Up
SORTIE	Sortie	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	<<	TUNE-	<< / Tune-
	Left		Left

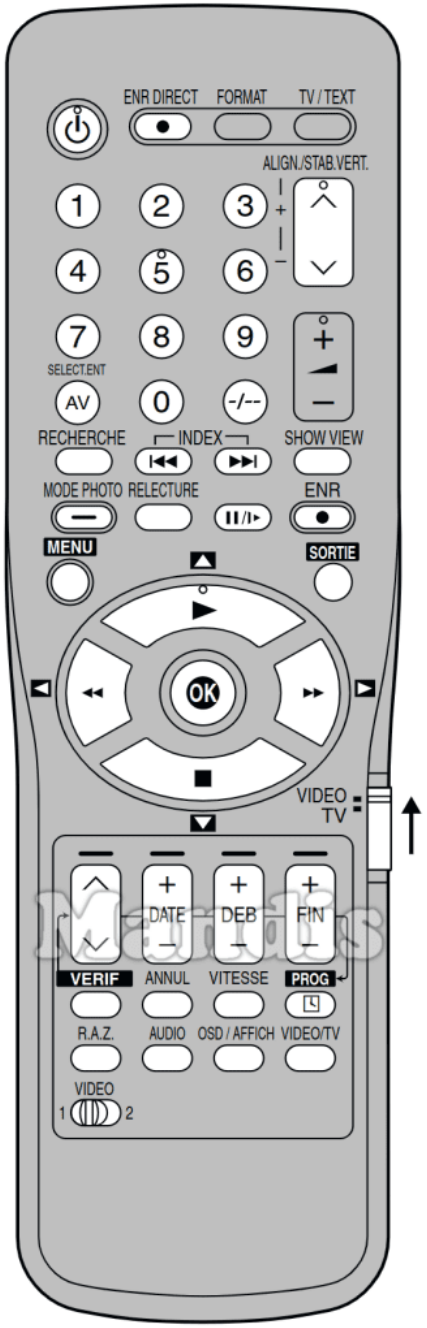

Original	Rechange	Original	Rechange
OK	OK	Reset	SHIFT + VIDEO 4 Shift + 4
Right	Right	Audio	LANG I/II AUDIO Audio / Lang I/II
>>	TUNE+ >> / Tune+	OSD Affich	ANGLE INFO Info / Angle
Down	Down	AV Link	LIST SMART Smart / List
Stop	HOLD Stop / Hold		
Verif Up/Red	SHIFT + CH PAGE + Shift + CH+ /		
Date+/Green	SHIFT + DVD 2 Shift + 2		
Deb+/Yellow	SHIFT + CD - STB 3 Shift + 3		
Fin+/Blue	SHIFT + AUX - HDD 7 Shift + 7		
Verif Down	SHIFT + CH PAGE − Shift + CH- /		
Date-	SHIFT + TAPE 5 Shift + 5		
Deb-	SHIFT + TUNER 6 Shift + 6		
Fin-	-/-- GUIDE EPG Guide / EPG / -/--		
Verif	RETURN BACK Back / Return		
Annul	SHIFT + CLEAR EXIT CANCEL Shift + Exit / Cancel / Clear		
SP/LP/EP	EQ SUBTITLE Subtitle / EQ		
Prog	TIMER SLEEP Sleep / Timer		

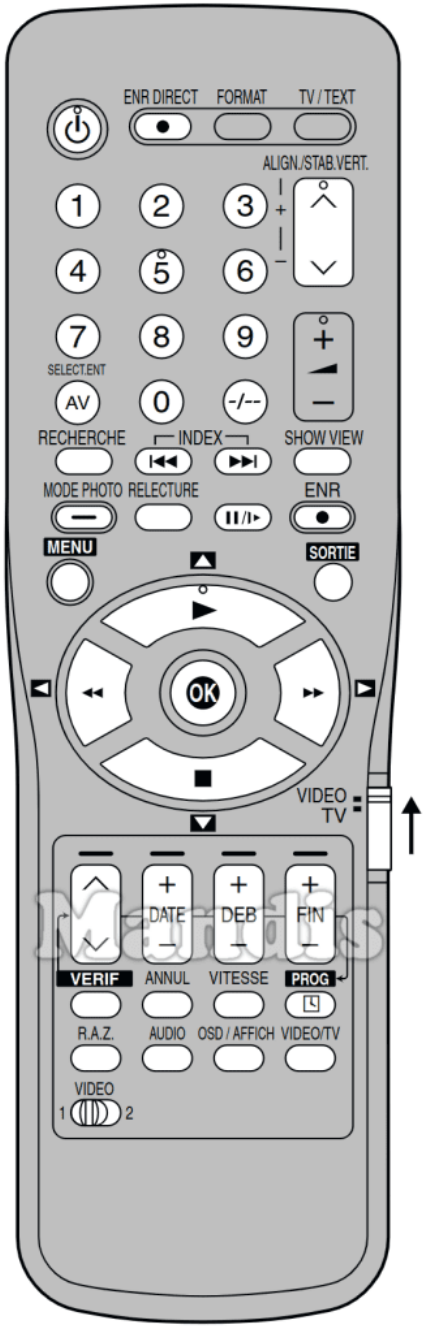

Original		Rechange	
	Power		Power
FORMAT	Format	FORMAT PICTURE	Picture / Format
TV / TEXT	Tv/Text	GOTO TEXT	Text / Goto
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
ALIGN./STAB.VERT. +	Align / Stab. Vert. +	+ CH PAGE	CH+ / Page+
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
	Align / Stab. Ver	CH PAGE −	CH- / Page-
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
+	Vol +	+ VOL	Vol +
SELECT.ENT AV	AV/Select Ent	RDS AV INPUT	AV / Input / RDS
0	0	HDMI - SAT 0	0

Original		Rechange	
-/--	-/--	-/-- GUIDE EPG	Guide / EPG / -/--
−	Vol -	VOL −	Vol -
−	Verif Up		Up
−	Red	NETFLIX SEARCH	Red / Netflix / Search
+ DATE	Green	APP REPEAT	Green / APP / Repeat
+ DATE	Date+		Right
+ DEB	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
+ DEB	Deb+	SHIFT + + VOL	Shift + Vol +
+ FIN	Blue	Prime Video RANDOM	Blue / Prime Video / Random
+ FIN	Fin+	SHIFT + + CH PAGE	Shift + CH+ /
	Verif Down		Down
DATE −	Date-		Left
DEB −	Deb-	SHIFT + VOL −	Shift + Vol -
FIN −	Fin-	SHIFT + CH PAGE −	Shift + CH- /