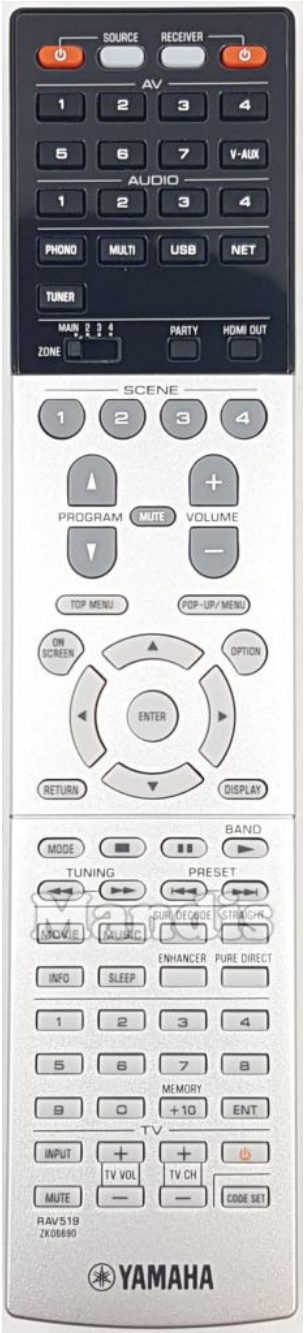

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
MULTI	Multi	SHIFT + APP REPEAT	Shift + Green / APP /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime Video / Random

Original		Rechange	
NET	Net	SHIFT + LIST SMART	Shift + Smart / List
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
PROGRAM	Program Up	+ CH PAGE	CH+ / Page+
PROGRAM	Program Down	CH PAGE −	CH- / Page-
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume-	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT / Tools

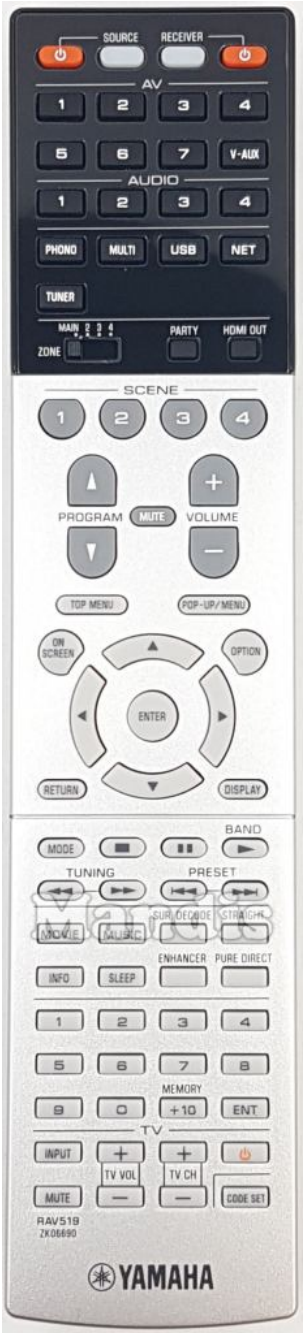

Original		Rechange	
RETURN	Return	RETURN BACK	Back / Return
DISPLAY	Display	MEDIA DISPLAY	Display / Media
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
■	Stop	HOLD ■	Stop / Hold
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze
BAND ▶	Play/Band	SLOW ▶	Play / Slow
TUNING ◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-
TUNING ▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+
PRESET ◀◀	I<< Preset	PRESET- ◀◀	I<< / Preset-
PRESET ▶▶	Preset >>I	PRESET+ ▶▶	>>I / Preset+
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II

Original		Rechange	
SUR. DECODE	Sur Decode	SURROUND ⏏	Eject / Surround
STRAIGHT	Straight	TITLE SOUND	Sound / Title
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
ENHANCER	Enhancer	GOTO TEXT	Text / Goto
PURE DIRECT	Pure Direct	PROGRAM TV/RADIO	TV/Radio /
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--

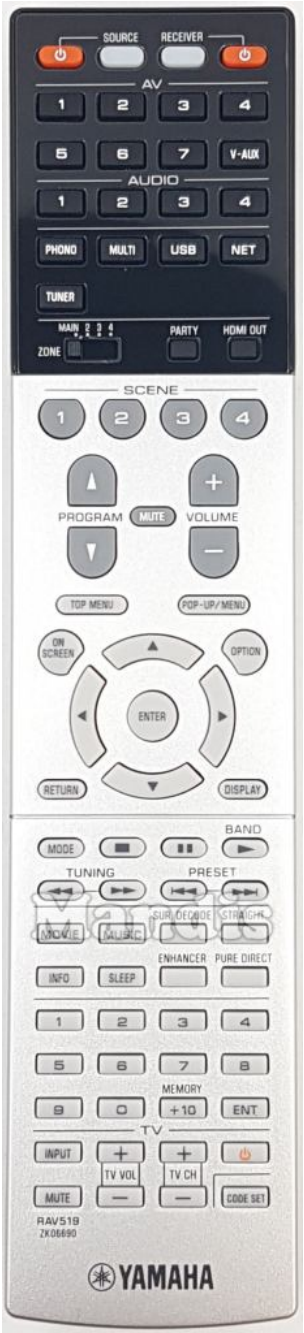

Original	Rechange	Original	Rechange
ENT.	Fav / Marker / PC		

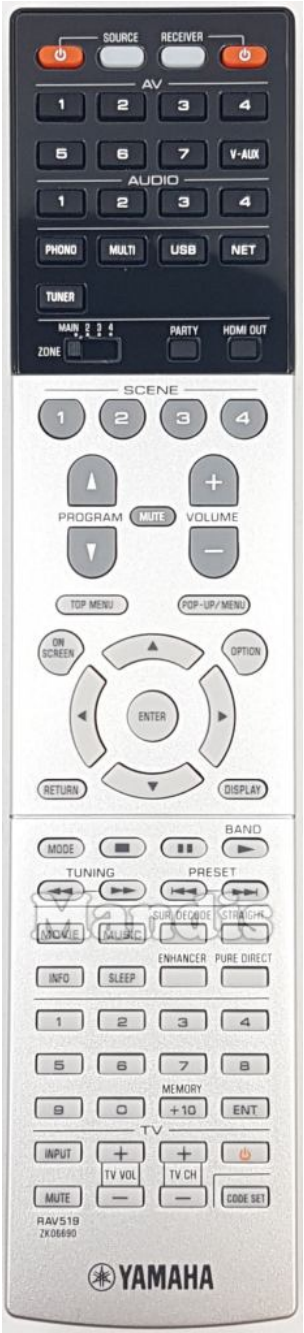

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Power
1	AV1	SHIFT +	TV 1
2	AV2	SHIFT +	DVD 2
3	AV3	SHIFT +	CD-STB 3
4	AV4	SHIFT +	VIDEO 4
5	AV5	SHIFT +	TAPE 5
6	AV6	SHIFT +	TUNER 6
7	AV7	SHIFT +	AUX-HDD 7
V-AUX	V-AUX	SHIFT +	USB 8
1	Audio 1	SHIFT +	BLUETOOTH 9
2	Audio 2	SHIFT +	-/-- GUIDE EPG
3	Audio 3	SHIFT +	HDMI-SAT 0
4	Audio 4	SHIFT +	PC FAV MARKER
PHONO	Phono	SHIFT +	NETFLIX SEARCH
NET	Net	SHIFT +	LIST SMART
USB	USB	SHIFT +	Prime Video RANDOM

Original		Rechange	
TUNER	Tuner	SHIFT +	YouTube REPEAT A-B
PARTY	Party		LIST SMART
HDMI OUT	HDMI Out		RDS AV INPUT
1	Scene 1		NETFLIX SEARCH
2	Scene 2		APP REPEAT
3	Scene 3		YouTube REPEAT A-B
4	Scene 4		Prime Video RANDOM
	Mute		DIMMER MUTE
VOLUME +	Volume+		VOL +
VOLUME −	Volume-		VOL −
POP-UP/MENU	Pop-Up Menu		HOME MENU
TOP MENU	Top Menu		TOP MENU D.MENU
OPTION	Option		OPT-TOOLS SETUP
DISPLAY	Display		MEDIA DISPLAY
RETURN	Return		RETURN BACK
ON SCREEN	On Screen		SIZE ZOOM
▲	Up		▲

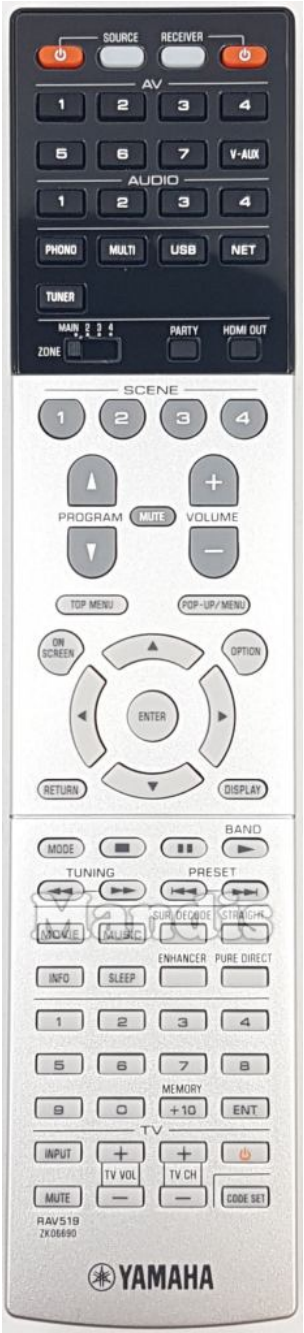

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

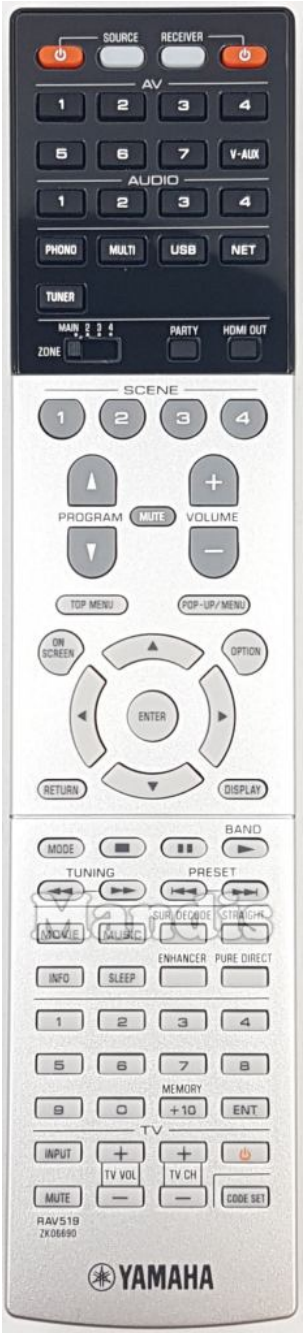

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
NET	Net	SHIFT + LIST SMART	Shift + Smart / List

Original		Rechange	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume -	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
INFO	Info	ANGLE INFO	Info / Angle
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
RETURN	Return	RETURN BACK	Back / Return
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
ENTER	Enter	OK	OK

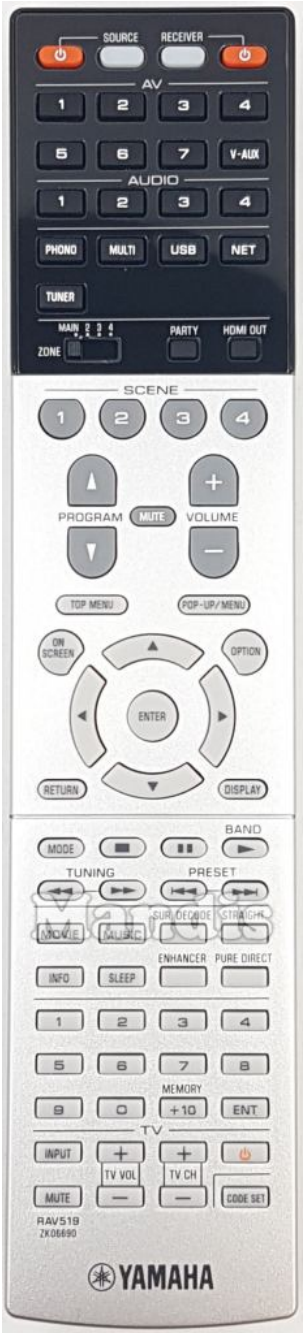

Original		Rechange	
DISPLAY	Display	MEDIA DISPLAY	Display / Media
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
MODE	Mode	FORMAT PICTURE	Picture / Format
■	Stop	HOLD ■	Stop / Hold
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze
BAND ▶	Play/Band	SLOW ▶	Play / Slow
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+
⏮	I<< Preset	PRESET- ⏮	I<< / Preset-
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

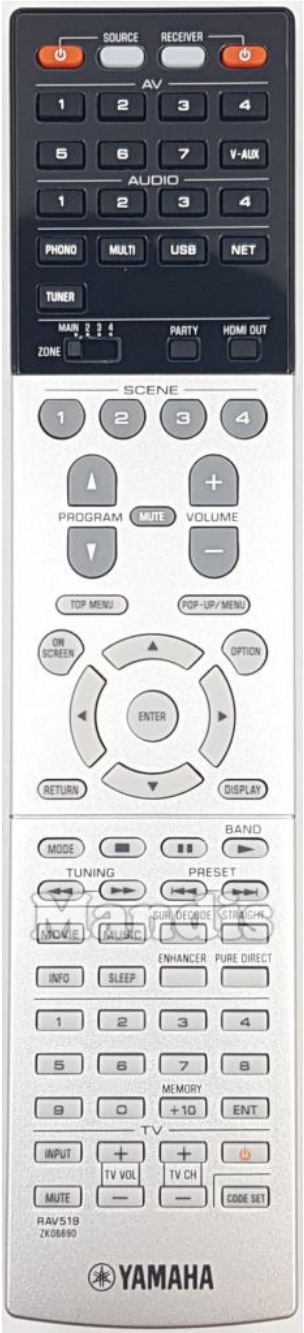

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Power
1	AV1	SHIFT +	TV 1
2	AV2	SHIFT +	DVD 2
3	AV3	SHIFT +	CD-STB 3
4	AV4	SHIFT +	VIDEO 4
5	AV5	SHIFT +	TAPE 5
6	AV6	SHIFT +	TUNER 6
7	AV7	SHIFT +	AUX-HDD 7
V-AUX	V-AUX	SHIFT +	USB 8
1	Audio 1	SHIFT +	BLUETOOTH 9
2	Audio 2	SHIFT +	-/-- GUIDE EPG
3	Audio 3	SHIFT +	HDMI-SAT 0
4	Audio 4	SHIFT +	PC FAV MARKER
PHONO	Phono	SHIFT +	NETFLIX SEARCH
USB	USB	SHIFT +	Prime Video RANDOM
NET	Net	SHIFT +	LIST SMART

Original		Rechange	
TUNER	Tuner	SHIFT +	YouTube REPEAT A-B
PARTY	Party		LIST SMART
HDMI OUT	HDMI Out		RDS AV INPUT
1	Scene 1		NETFLIX SEARCH
2	Scene 2		APP REPEAT
3	Scene 3		YouTube REPEAT A-B
4	Scene 4		Prime Video RANDOM
+ VOLUME	Volume+		VOL +
VOLUME −	Volume-		VOL −
MUTE	Mute		DIMMER MUTE
TOP MENU	Top Menu		TOP MENU D.MENU
POP-UP/MENU	Pop-Up Menu		HOME MENU
ON SCREEN	On Screen		SIZE ZOOM
OPTION	Option		OPT-TOOLS SETUP
RETURN	Return		RETURN BACK
DISPLAY	Display		MEDIA DISPLAY
▲	Up		▲

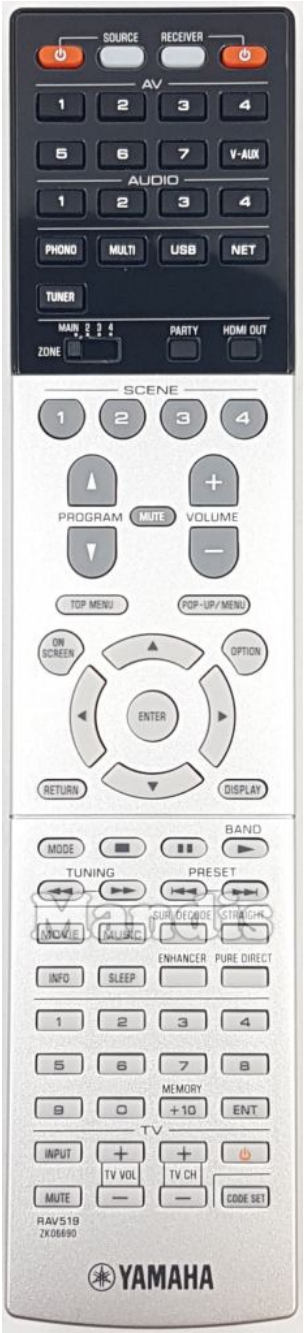

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC